


SWITEL

BCC 37

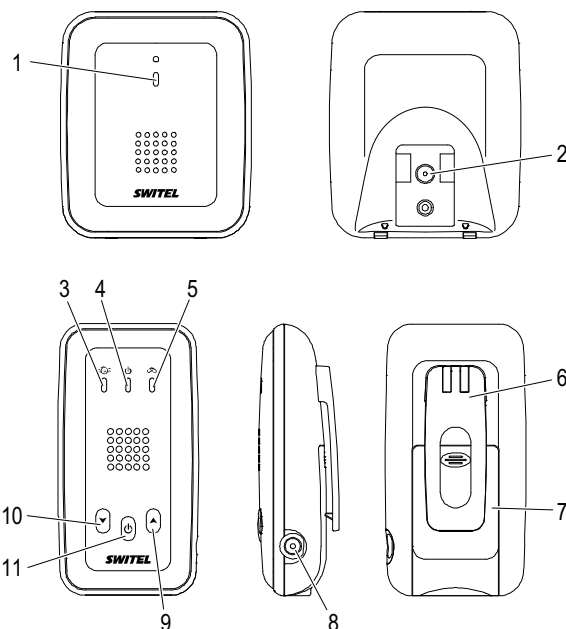

ENGLISH

Operating Manual

Please read and observe the following information and keep the operating manual nearby for future reference!

Safety information

WARNING!

- Risk of fatal injury through cable!
Children could become entangled in the cables and strangle themselves.

- ➔ Ensure that the baby monitoring units and power cable are out of reach of babies/children, i.e. they are at least one meter away.

- Risk of explosion!
 - ➔ Only use the power adapter plug supplied!
 - ➔ Only use the battery supplied or ones of the same type!
 - ➔ Always treat batteries with due care and attention and only use them as described.
 - ➔ Never use standard and rechargeable batteries together. Never use rechargeable batteries or standard batteries with different capacities or charge statuses together. Never use rechargeable batteries or standard batteries which are damaged.

- Risk of suffocation through small objects, packaging and protective foil!
 - ➔ Keep children away from the product and its packaging!

CAUTION!

- Risk of fire through power adapter plugs!
Power adapter plugs can heat up.
 - ➔ Never leave any objects on the power adapter plugs. Ensure access to the power adapter plugs is not obstructed by furniture or such.

- Risk of tripping due to improperly laid cable!
 - ➔ Lay the cables so that nobody can trip over them!

- Batteries represent a hazard to health and the environment!
 - ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

Intended use

The baby monitor serves to monitor a baby/child in a room. The transmitter unit, located near the child, transmits noises made by the baby/child to the receiver unit. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the devices or complete any repair work yourself.

Use only in suitable environments

Observe all local directives and regulations. Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Package contents

- Receiver unit
- Transmitter unit
- Battery
- Power adapter plug, transmitter unit
- Power adapter plug, receiver unit
- Operating manual

Operating elements


Transmitter unit

- 1 Operating indicator
- 2 Power adapter plug socket

Receiver unit

- 3 Noise indicator
- 4 Operating indicator
- 5 Reception indicator
- 6 Belt clip
- 7 Battery compartment
- 8 Power adapter plug connection
- 9 Increase the volume
- 10 Reduce the volume
- 11 On/Off switch

Inserting the battery in the receiver unit

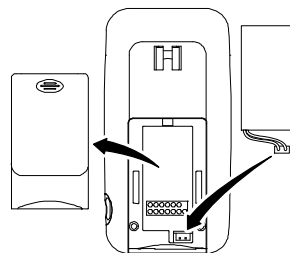

- ➔ Open the battery compartment.
- ➔ Connect the plug from the battery and insert the battery.
- ➔ Close the battery compartment.

Starting up the transmitter unit

- ➔ Connect the power adapter plug to the power adapter socket [2] on the transmitter unit and plug it into the mains power outlet. ➔ The operating indicator [1] lights up and the device is in operation.

- The transmitter unit also transmits when the receiver unit is not in operation. The signals can be received by other units.

Switching the transmitter unit off

- ➔ Disconnect the power adapter plug from the mains power outlet.

Starting up the receiver unit

- ➔ Connect the power adapter plug to the power adapter socket [8] on the receiver unit and plug it into the mains power outlet.
- ➔ Press the button [11] to switch the unit on. ➔ The operating indicator [4] lights up.

If the operating indicator [4] flashes, the battery is being charged. When the battery is charged, the receiver unit can also be operated without a mains power supply.

- The range is maximally 300 m but can be reduced by obstacles such as walls etc. If the receiver unit is outside the range, the indicator [5] flashes.

Changing the volume

- ➔ Press the button [9] ➔ Raise the volume.
- ➔ Press the button [10] ➔ Lower the volume.

Noise indicator

The noise indicator [3] indicates the volume of a noise. The louder the noise, the faster the indicator flashes.

Switching the receiver unit off

- ➔ Press the button [11] ➔ Switch the receiver unit off.

Power adapter plug, transmitter unit

Using the energy-efficient power adapter plug 5E-AD050060-E (input 100-240 V_{AC}, output 5 V_{DC}, 600 mA) the zero load is approx. 0,04 W. The average efficiency is approx. 69,5 %. The maximum power consumption is approx. 1,2 W.

Power adapter plug, receiver unit

Using the energy-efficient power adapter plug 5E-AD050060-E (input 100-240 V_{AC}, output 5 V_{DC}, 600 mA) the zero load is approx. 0,04 W. The average efficiency is approx. 69,5 %. The maximum power consumption is approx. 1,1 W.

Service hotline

In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, please contact your sales outlet.

Maintenance

- ➔ Clean the surface of the housing with a soft, fluff-free cloth.
- ➔ Do not use any cleaning agents or solvents.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of **old electronic and electrical devices** in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

You are legally obliged to dispose of power packs and batteries at the point-of-sale or in the corresponding containers provided at collection points by the public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.

Packaging materials must be disposed of according to local regulations.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the SWITEL device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive 1999/5/EC concerning radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site at www.switel.com.