

# **T9**

## **USER'S MANUAL**

## PLEASE READ THIS USER'S MANUAL

Thank you for purchasing this new model T9. Please read this manual before attempting to set up or use this unit. It contains important information of installation and use. Keep this manual for future reference.

### FEATURE LIST

1. R, Mute
3. Last number redial
2. Ringer volume selection
3. Ringer indicator
4. Installation as a wall unit

### INTRODUCTION

#### CHECK THE CONTENTS OF THE BOX

Box should contain:

- Handset with handset cord
- Phone base
- User's manual

#### CONNECTING LINE CORD

Plug one end of the supplied modular cord into the line jack. Then plug the other end into telephone line jack.

### TROUBLESHOOTING GUIDE

**PROBLEM:** No dialling tone

**SOLUTION:**

- Check all modular plugs to be sure they have clicked into place.
- Are the cords damaged in any way?
- Try another phone jack. If your telephone works on another jack, there maybe a problem with your wiring.

**PROBLEM:** Phone doesn't ring.

**SOLUTION:**

How many extensions are connected to your line? If more than five telephones are installed on the same line, you may need to contact your local telephone company to confirm the maximum number of extensions for your calling area.

### ADDITIONAL INFORMATION

1. Avoid rough handling, areas with excessive moisture, heavy dust or extreme temperature.
2. The unit should be cleaned regularly, use a mild detergent and slightly damp cloth, never use strong solvent or abrasive.
3. Do not expose the telephone in direct sunlight or use it in extreme humidity.

1. The desk use position

2. The wall mounting use position

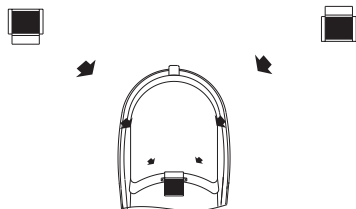


Figure 2

5. To install as a wall unit (See figure 3)

- a. Align the hole on the back of the telephone with mounting pins on the wall.
- b. Slowly slide the unit down until it snaps into place.

 
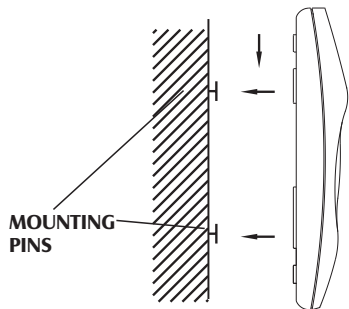 


Figure 3

## LOCATION OF CONTROLS

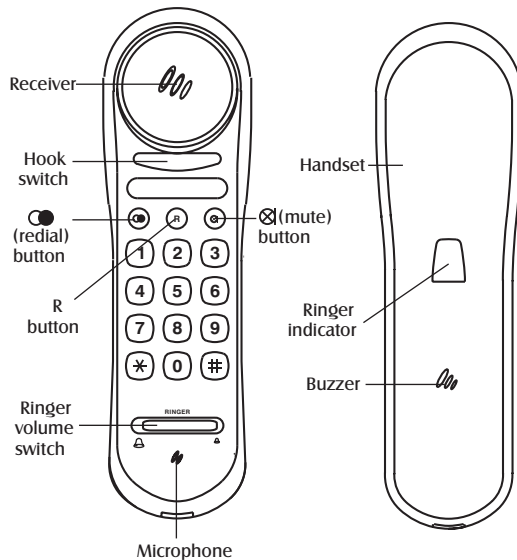

## OPERATIONS FOR TELEPHONE

### ● Ringer volume selection

Move the ringer volume control to left to have the maximum ringer volume. To have the gentle ringer volume, move the control to right.

### ● Normal dialling

1. Lift the handset.
2. Enter the telephone number you want to dial.

### ● Redial function

Lift the handset, then press the **☎** button to redial the last telephone number you dialed.

### ● R function

Press the **R** button to terminate a call and institute a dialling tone for another call or to get another call from "Call Waiting" (a special telephone service).

**NOTE:** If you do not have any special telephone service, such as Call Waiting, press the **R** button during a call may disconnect your current conversation.

### ● Mute function

If you wish to speak privately to someone else in the room without your caller overhearing, press and hold the **🔇** button. Then the caller can not hear you during the mute operation. To resume normal conversation, just release the **🔇** button.

### ● Wall Installation

The unit can be mounted to any wall surface using two self-tapping screws(not supplied). Follow the instructions.

1. Install the two self-tapping screws at a distance of 8.3cm from each other and located on a vertical center line. (See figure 1)

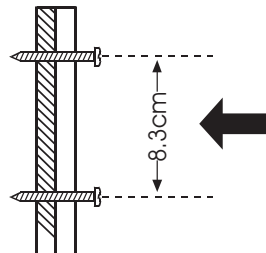


Figure 1

2. Tighten each screw just enough to allow the wall mounting bracket enough clearance to slip snugly over each screw head.
3. Connect one end of the telephone line cord into the unit line Jack. Connect the remaining end of the telephone line cord into a nearby telephone jack.
4. The handset hanger tab is shipped in the wall mounting use position. For desk use position, slide the tab out and rotate 180 degrees. (See figure 2)