


TE20



ENGLISH

Operating Manual

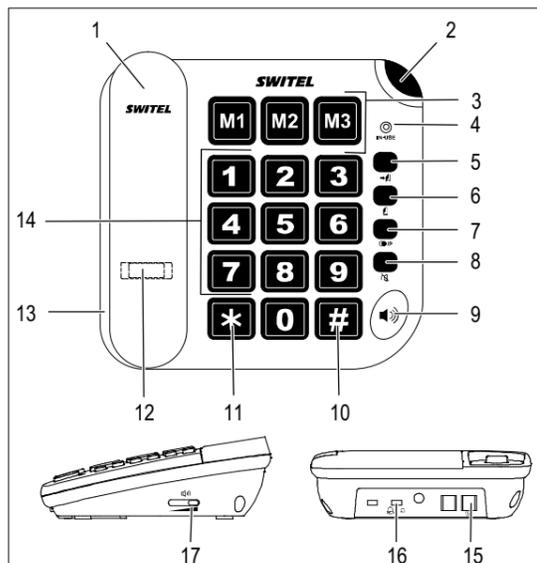

Please read and observe the following information and keep the operating manual nearby as a future source of reference!

Safety information

⚠ WARNING!

- Risk of explosion in potentially explosive atmospheres!
- ➔ Do not use the equipment in potentially explosive atmospheres, e.g. in the direct vicinity of petrol pumps!

⚠ CAUTION!

- Risk of tripping due to improperly laid cable!
- ➔ Lay the cables so that nobody can trip over them!

Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Use only in suitable environments

Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Package contents

- Base
- Receiver
- Telephone connection cable
- Helix cable
- Operating manual

Connecting the receiver

- ➔ Connect the helix cable to the receiver [1].
- ➔ Connect the helix cable to the helix cable connection socket [13].

Connecting the telephone line

- ➔ Connect the telephone connection cable to the telephone line socket [15].
- ➔ Connect the telephone connection cable to the telephone wall socket.

Operating elements (see diagram)

- 1 Receiver
- 2 "Incoming call" lamp
- 3 One-touch dialling keys
- 4 "In use" lamp
- 5 "Initiate saving process" key
- 6 "Open memory" key
- 7 "Redialling" key
- 8 "Microphone on/off" key
- 9 "Handsfree mode on/off" key
- 10 Hash key
- 11 Star key
- 12 "Receiver volume" switch (under the receiver)
- 13 Helix cable connection socket
- 14 Digit keys 0-9
- 15 Telephone line connection socket
- 16 "Ringing tone volume" switch
- 17 "Handsfree mode volume" switch

Taking a call

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.

Taking a call in handsfree mode

- ➔ Press the key [9].

Making a call

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Dial the phone number with the digit keys 0-9 [14].
- ➔ Complete the call.
- ➔ Replace the receiver [1]. ➔ Call is ended. Lamp [4] goes out.

Making a call in handsfree mode

- ➔ Press the key [9]. ➔ Lamp [4] lights up.
- ➔ Dial the phone number with the digit keys [14].
- ➔ Complete the call.
- ➔ Press the key [9]. ➔ Call is ended. Lamp [4] goes out.

Redialling

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the key [7]. ➔ The last phone number dialled is dialled again.

Deactivating the microphone

During a call:

- ➔ Press the key [8]. ➔ The caller can no longer hear you.

Activating the microphone

When the microphone is switched off:

- ➔ Press the key [8]. ➔ The caller can hear you again.

Setting the handsfree volume

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the key [9]. ➔ Handsfree mode is activated.
- ➔ Set the handsfree volume using the switch [17].

Setting the ringing volume

- ➔ Set the ringing tone volume using the switch [16].

Setting the receiver volume

- ➔ Set the receiver volume using the switch [12].

Storing one-touch dialling numbers

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the key [5].
- ➔ Enter the phone number to be stored using the digit keys 0-9 [14].

- ➔ Press the one-touch dialling key [2] to which the phone number should be assigned.

- ➔ Replace the receiver [1].

Dialling from one-touch dialling keys

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the one-touch dialling key [3]. ➔ The phone number assigned to the key is dialled.

Storing quick dial numbers

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the key [5].
- ➔ Enter the phone number to be stored using the digit keys 0-9 [14].
- ➔ Press the key [5].
- ➔ Press the digit key 0-9 [14] to which the phone number should be assigned.
- ➔ Replace the receiver [1].

Dialling using a quick dial key

- ➔ Pick up the receiver [1]. ➔ Lamp [4] lights up.
- ➔ Press the key [6].
- ➔ Press the digit key 0-9 [14] to which the quick dial phone number is assigned. ➔ The phone number assigned to the key is dialled.

Inserting photos

- ➔ Remove the cover from the one-touch dialling key [3].
- ➔ Place the respective photo on the one-touch dialling key [3].
- ➔ Replace the cover on the one-touch dialling key [3].

Service hotline

In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min)
In the case of claims under the terms of guarantee, please contact your sales outlet.

Phone maintenance

- ➔ Clean the surface of the housing with a soft, fluff-free cloth.
- ➔ Do not use any cleaning agents or solvents.

Disposal

 In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

 **Batteries represent a hazard to health and the environment!**

 Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

 You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities.

Disposal is free of charge. The above symbols indicate that the batteries must not be disposed of in domestic waste and that they must be disposed of at an authorised collection point.

Packaging materials must be disposed of according to local regulations.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply where the cause of equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Declaration of conformity

 This device fulfils the requirements stipulated in the EU directive:

1999/5/EC directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site at www.switel.com.