


SWITEL

Cordless telephone DE 2111

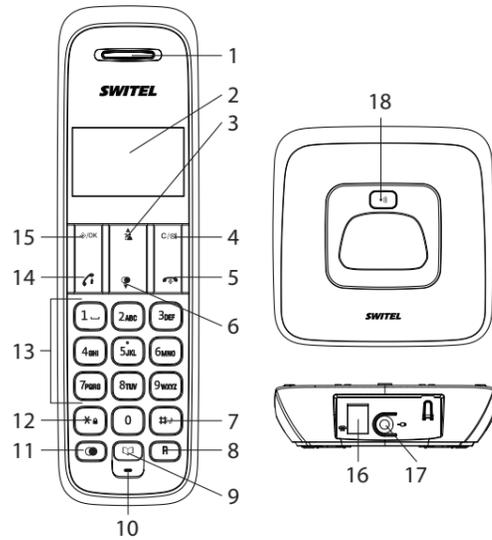

Operating Elements

- 1 Earpiece
- 2 Display
- 3 Call list, Up key
- 4 Softkey (intercom / delete entry / Microphone mute)
- 5 Hang Up button, switch handset on / off (hold 2 sec.)
Phone rings: Reject a call, call: end call
- 6 Redial, Down key
- 7 turn ringer on / off
- 8 R-key
- 9 Stand-by mode: Open the phone book
- 10 Microphone
- 11 Redial last call
- 12 Keylock (hold 2 sec.)
- 13 Digit keys
- 14 Stand-by mode: Pick up the handset / make call
- 15 Stand-by mode: Open menu / confirm
- 16 Telephone jack
- 17 Socket power supply
- 18 Search handset (paging)

STARTING UP

Connecting the telephone line

- ➔ Connect the telephone cable to the telephone line socket.
- ➔ Connect the telephone cable to the telephone line wall socket.

Connecting the power adapter plug


- ➔ Connect the cable of the power adapter plug to the base station.
- ➔ Connect the power adapter plug in a properly installed mains power outlet

Inserting the batteries

⚠ ATTENTION!

- The batteries or telephone could be damaged. Pay attention that the batteries are inserted correctly. Switch the telephone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

Insert the batteries according to the diagram.

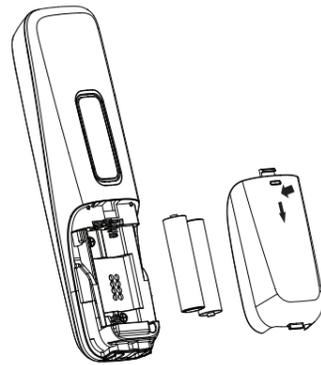

Charging the batteries

- Charge the batteries for at least 12 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the batteries.
- ➔ Place the handset in the base station.

DISPLAY AND NOTATION OF OPERATING SEQUENCES

- Press the button depicted
- 2 sec. Press and hold down the button depicted for 2 seconds
- Next step following correct entry
- Mark next menu point with navigation button and confirm with left softkey.
- Enter digits or letters
- [Example] Texts in square brackets give instructions to select an option or make an entry
- Display of an icon (example)
- [Settings] Display of text (example)
- [P/Book] Softkey (example)

ICONS IN THE HANDSET DISPLAY

- On: The connection to the base station is good.
Flashing: The connection to the base station is lost.
- On: Indicates the battery charge status.
Flashing while handset in base: Batteries are being charged.
- On: Batteries need charging.
Flashing: Batteries should be charged immediately.
- On: Pick up the line or a call is connected.
Flashing: Incoming call and ringing.
- The ringing tone has been switched off.
- On: The alarm function is activated. Flashing: The alarm is ringing.
- The key lock is activated
- You received a message in your answering machine provided by the telephone network (depending on telephone network/provider).
- On: Internal call function (only with additional handsets registered)
Flashing: Incoming internal call.
- While browsing call list: New call.
- Character overflow left/right. Use to scroll.

SET THE DISPLAY LANGUAGE

- ➔ **HS Settings** **Language**
- [Select language]

CALLING

Call

- ➔ [Enter the phone number] ➔ Number is dialed.

Answering a call

- When the handset is not in the base:

Ending a call

- ➔

Redial

Your phone stores the last 5 numbers dialed.

- ➔ [Select an entry]

Call from the call list

Your phone stores the last 10 calls in the call list.

- ➔ [Select an entry]

Call from the phonebook

The phone book can hold 20 entries.

- ➔ [Select an entry]

Edit Call List

- ➔ [Select an entry]

- Delete** ➔ The entry is deleted.

Editing the redial

- ➔ [Select an entry] **Save**

- [Enter name] [Enter the phone number]

- [Select melody]

Other editing menu analogous example above.

PHONEBOOK

Creating a new entry

- ➔ [Empty] **Edit Entry** [Enter name]

- [Enter the phone number] [Select melody]

-

Edit phonebook entries

- ➔ [Select an entry] **Delete**

-

Further processing in the PHONEBOOK menu analogous example above.

SETTINGS

Change PIN

- ➔ **BS Settings** **Enter PIN:**

- [0 0 0 0] [Enter a new PIN] [Enter new PIN again]

- If you have forgotten your PIN, please call our service hotline.

Reset phone to factory state

- ➔ **Default** [Enter PIN]

[Confirm with the following prompt]

- The phone directory is not deleted. Please delete the directory using the Phone Book menu. Registered Handsets are still registered.

Date / Time

- ➔ **HS Settings** **Date & Time**

- [Enter date and time]

Alarm

- ➔ **HS Settings** **Alarm**

- ON** [Enter the alarm time]

- Is „snooze“ on, this means that the alarm is repeated after 7 minutes, until the function is canceled by pressing and holding the hang. Is „snooze“ turned off, the alarm will be given once the set time. To acknowledge the alarm signal, press any key.

Automatic answer set

- ➔ **HS Settings** **Auto Answer**

- ON**

- When automatic answering a call is answered immediately when the handset is removed from the base.

Further processing in the SETTINGS menu analogous example above.

OPERATION ON TELEPHONE SYSTEMS / ADDITIONAL SERVICES

Handset login / logout

- ➔ **Registration** [Enter PIN]

- [Press and hold the paging key on the base for about 5 seconds. After a short time, the antenna icon in the display lights up constant and the handset is registered.]

- At a base station up to 5 handsets can be registered. To log in a „foreign“ handset please also consult the instruction manual for help.

Delete Handset

- ➔ **BS Settings** **Delete HS**

- [Enter PIN] [Select Handset]

- The handset you are currently using may not be deregistered.

Operation on telephone systems

- If your phone is connected to a telephone system, you can use the R key functions, such as call forwarding, automatic call back Please read the operating instructions for your telephone system, which you have to set the flash time to use these features. If your phone will work on your phone system to work, you should contact the dealer from whom the equipment was purchased. Please remember, with phonebook entries if the access code and a possibly required dialing pause („0“ long press) to enter.

Additional services provided by your network operator

- Your phone supports additional services of your network provider, such as brokering, call waiting and conference. About the R button you can use these extra services. Please check with your network provider which flash time must be set to use the supplementary services. For activation of additional services, please contact your network operator.

DEFAULT SETTINGS / DELIVERY STATUS

Call list	No entry
Phonebook	No entry
Alarm	Off
Ringer handset Internal call:	Melody 2
External call:	Melody 1
Volume:	3
Tone setup Key tone:	On
Battery tone:	On
Out of range:	On
Language	German
Handset name	DE 211x
Handset display	Handset name
Auto answer	On
Date & Time Date format:	DD-MM-YY
Time format:	24 hours
Dial mode	Tone
Flash time	Short (100 ms)
PIN	0 0 0 0

Technical data (All Rights Reserved!)

Feature	Value
Standard	DECT/GAP
Frequency range	1.88 ~ 1.90 GHz
Batteries	2 x NiMH 1.2 V Type AAA
Permissible operating temperature	0 °C – +40 °C

Power adapter plug

Using the energy-efficient power adaptor model VT04EEU06045 (input 100-240VAC, output 6VDC, 450mA). The no load power is approx. 0.1W. The average efficiency is approx. 70%. The maximum power consumption is approx. 1.5W.

Service hotline

In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, contact your sales outlet.

Maintenance

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer. If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to the laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities. Packaging materials must be disposed of according to local regulations.

Declaration of Conformity

This device fulfils the requirements stipulated in the Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site www.switel.com.

ENGLISH

Operating Instructions

- Please read and observe the following information and keep the operating manual nearby for future reference!

WARNING!

Safety information

- Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together. Never use rechargeable batteries or standard batteries with different capacities or charge statuses together. Never use standard or rechargeable batteries which are damaged.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.
- The telephone cannot be used to make calls in the event of a power failure. Always keep a cord connected telephone which operates without an external power supply available in case of emergency situations.
- Never use the telephone in the vicinity of medical equipment. Effects on such equipment cannot be fully ruled out.

CAUTION!

- Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

ATTENTION!

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

- Contact your telephone network provider with regard to enabling supplementary services.

Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Package contents

1 Base station, 1 power adapter plug, 1 Handset, 1 Telephone line cord, 2 Rechargeable batteries, 1 Operating instruction