


# SWITEL

## DC731 Cordless Telephone

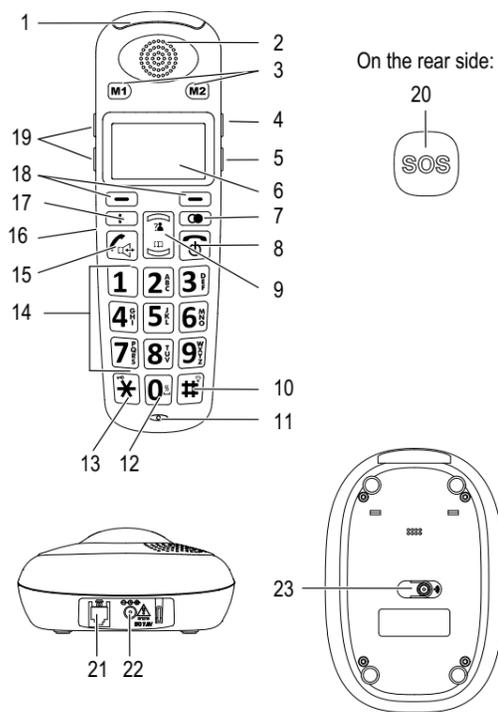

ENGLISH

## Operating Manual

**Please read and observe the following information and keep the operating manual nearby for future reference!**

### Safety information

**WARNING!**

- Risk of explosion!
- ➔ Only use the power adapter plug supplied!
- ➔ Only use the batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use them as described.

- Risk of fatal injury with heart pacemakers!
- ➔ Always keep the phone a minimum safety distance of at least 15 cm to heart pacemakers.
- ➔ Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!

- Batteries represent a hazard to health and the environment!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

**CAUTION!**

- Risk of hearing damage!
- ➔ Avoid listening at full amplified volume.

**ATTENTION!**

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

### Package contents

- 1 handset
- 3 rechargeable batteries
- 1 instruction manual
- 1 base station
- 1 power adapter plug

### Operating elements

- 1 Indicator lamp
- 2 Earpiece
- 3 **M1** and **M2** One-touch dialling keys
- 4 Change handset volume during a call
- 5 Switch handset volume amplification on/off during a call
- 6 Display
- 7 Standby mode: redialling  
When dialling a number: enter a dialling pause
- 8 Standby mode: press and hold to switch phone on/off  
Phone is ringing: reject call  
During call: end call
- 9 In menu: navigate / select menu option  
Standby mode: open call list, open phone book
- 10 Standby mode: Press and hold to switch the signal lamp on/off
- 11 Microphone
- 12 When entering digits: enter a 0  
When entering text: enter a space and punctuation marks  
Standby mode: switch vibration on/off
- 13 Standby mode: press and hold to switch key lock on/off
- 14 Digit keys 1-9
- 15 Dial phone number / take incoming call  
During call: activate handsfree function
- 16 Connection socket for headset
- 17 Call another handset
- 18 Softkeys (function is indicated in the display above the respective key)
- 19 Change ringing volume of the handset
- 20 Press to issue an emergency call (SOS)
- 21 Telephone line socket
- 22 Power adapter plug connection socket
- 23 Paging key

### Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

### Starting up

#### Connecting the telephone line

- ➔ Connect the telephone cable to the telephone line socket.
- ➔ Connect the telephone cable to the telephone line wall socket.

#### Connecting the power adapter plug

- ➔ Connect the cable of the power adapter plug to the base station.
- ➔ Connect the power adapter plug to the mains power outlet.


#### Inserting the batteries

##### ATTENTION!

- The batteries or phone could be damaged.
- ➔ Pay attention that the batteries are inserted correctly.

Switch the phone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

Insert the batteries according to the diagram.

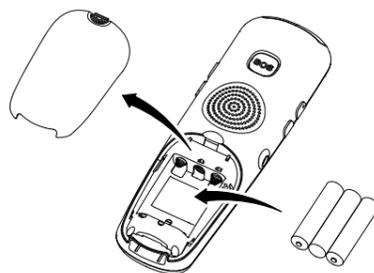

### Charging the batteries

##### ATTENTION!

- ➔ Observe the safety instructions provided at the beginning of this manual.

Charge the batteries for at least 12 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the batteries.

- ➔ Place the handset back in the base station.

### Display and notation of operating sequences

- Press the key depicted
- 2 sec. Press the key depicted for 2 seconds
- Move to the menu option with the Navigation keys
- to mark it and confirm selection with the left-hand softkey.
- Sequence for correct entry
- Enter digits or letters
- [Example] Texts in brackets give instructions to select something or make an entry.
- Text in the display (example)
- Softkey function in the display (example)
- Icon in the display (example)

### Icons

- Signal strength of the communication connection
- Battery charge status
- Key is locked against use
- Vibration is switched on
- Alarm clock is switched on
- Missed call
- New mailbox message received (condition: your network provider supports this function)
- Handset has been raised and the line is free
- Handsfree function is activated

### Entering text

The keys on the keypad are also labelled with letters for the entry of text.

#### Entering spaces and punctuation marks

- ➔

#### Entering special characters

- ➔

#### Deleting characters

- ➔

#### Moving the cursor left or right

- ➔ /

### Telephoning

#### Dialling a phone number

- ➔ [Enter the phone number]

#### Selecting a phone number from the phone book

- ➔ [Open the phone book]
- ➔ [Select the phone book entry]

### Redialling

- ➔ / [Select the phone number]

### Muting (microphone) off/on

During a call:

- ➔

### Phone book

#### Creating a new phone book entry

- ➔
- ➔ [Enter the name]
- ➔ [Enter the phone number]
- ➔ [Select a melody]

#### Deleting a phone book entry

- ➔
- ➔ [Select the entry] [Confirm the prompt]

#### Editing a phone book entry

- ➔
- ➔ [Select the entry]
- ➔ [Enter the name]
- ➔ [Enter the phone number]
- ➔ [Select a melody]

#### Deleting all phone book entries

- ➔ [Confirm the prompt]

#### Displaying the phone book memory status

- ➔

### Call list

#### Open the call list

- ➔

#### Dialling from the call list

- ➔
- ➔ / [Select the entry]

#### Storing phone numbers from the call list in the phone book

- ➔
- ➔ / [Select the entry]
- ➔ [Enter the name] [Edit the number]
- ➔ [Select a melody]

#### Deleting an entry / all entries from the call list

- ➔
- ➔ / [Select the entry]
- ➔ / [Confirm the prompt]

### One-touch dialling keys

#### Saving numbers for the one-touch dialling keys

The one-touch dialling key numbers are stored in the phone book and assigned to "M1" and "M2". If these entries are not already in your phone book, save them for the one-touch dialling keys as follows:

- ➔ **M1** / **M2** [Enter the respective phone number]
- ➔ [Select a melody]

#### Dialling using the one-touch dialling keys

- ➔ **M1** / **M2**

#### Editing/Deleting numbers assigned to one-touch dialling keys

To edit or delete the phone numbers assigned to the one-touch dialling keys, proceed as for other phone book entries.

### Basic settings

#### Setting the language

- ➔
- ➔ [Select the language]

#### Setting the time and date

- ➔
- ➔ [Enter the date]
- ➔ [Enter the time]

#### Setting the display format for time and date

- ➔
- ➔ / [Select the format]

#### Restoring the factory settings

- You require the PIN in order to restore the default settings. On leaving the factory, the PIN was **0000**.

You can restore the default settings on the base station and handset separately.

- ➔ /
- ➔ [Enter the PIN]

#### Changing the PIN code

- ➔
- ➔ [Enter the old PIN]
- ➔ [Enter the new PIN]
- ➔ [Confirm the new PIN]

#### Setting the alarm clock

- ➔
- ➔ [Enter the time for the alarm]
- ➔

#### Setting the display contrast

- ➔
- ➔ / [Set the contrast]

#### Ringing tone settings

##### Setting the ringing tone for internal/external calls

- ➔
- ➔ [Select the ringing tone]

##### Switching the key tone and range warning signal on/off

- ➔
- ➔

##### Setting the loudspeaker and earpiece volume levels

- ➔
- ➔

##### Setting the amplified call volume

- ➔
- ➔

##### Automatic answering

- ➔

##### Setting the dialling mode

- ➔

##### Entering handset names

- ➔
- ➔ [Enter the name]

### Additional functions

#### Flash function

- Your telephone supports supplementary services provided by your telephone network provider, such as brokering, call wait-

