

SWITEL

COMMUNICATION PRODUCTS

**DECT telephone set with
7" photoframe**

DPF962



Operating Instructions

SWITEL

Operating Instructions 3

Declaration of Conformity 48

1	Safety Information	4
2	Preparing the Telephone	6
3	Operating Elements	9
4	Preliminary Information	10
5	Menu Structure	13
6	Phone Book	15
7	Call Log	17
8	Telephoning	19
9	Extending the Telephone System . . .	24
10	Special Functions	26
11	PABX / Supplementary Services	26
12	Starting the Picture Frame	28
13	Operating Elements	29
14	Preliminary Information	32
15	Menu Structure	35
16	Telephoning	38
17	Call Log	39
18	In Case of Problems	40
19	Technical Properties	43
20	Maintenance / Guarantee	45
21	Index	46

Safety Information

1 Safety Information

Please read this operating instruction manual thoroughly.

Intended use

The **phone** is suitable for telephoning within a public telephone network system.

Only use the **picture frame** as described in this manual.

Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the devices or complete any repair work yourself.

Installation location

Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Do not use the handset in potentially explosive areas.

Power adapter plugs



Attention: Only use the power adapter plugs supplied because other power adapter plugs could damage the devices. Ensure access to the power adapter plugs is not obstructed by furniture or such.

Rechargeable batteries



Attention: Never throw batteries into a fire. Only use batteries of the same type. Pay attention to correct polarity. Incorrect polarity of the batteries represents a risk of explosion during charging.

Power failure

The telephone cannot be used to make calls in the event of a power failure. Always keep a cord connected telephone which operates without an external power supply available in case of emergency situations.

Medical equipment



Attention: Never use the telephone in the vicinity of medical equipment. Effects on such equipment cannot be fully ruled out.

DECT¹ telephones can cause an unpleasant humming sound in hearing aids.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). The adjacent symbol indicates that the device must not be disposed of in normal domestic waste! According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container.



Batteries must be disposed of at the point of sale or at the appropriate collection points provided by the public waste authorities.



Packaging materials must be disposed of according to local regulations.

¹ **DECT:** Digital Enhanced Cordless Telecommunication = Standard for cordless telephones.

Preparing the Telephone

2 Preparing the Telephone

Safety information



Attention: It is essential to read the Safety Information in Chapter 1 before starting up.

Checking the package contents

The package contains:

Content	DPF96x Model ¹			
	962	963	964	965
Base station with power adapter plug	1	1	1	1
Charging station with power adapter plug	-	1	2	3
Handset	1	2	3	4
Telephone connection cable	1	1	1	1
Batteries	2	4	6	8
Picture frame	1	1	1	1
Remote control with battery	1	1	1	1
Operating instructions	1	1	1	1

Connecting the base station

 


Attention: Position the base station at least 1 m away from other electronic devices, otherwise there is a risk of mutual disturbance.

Connect the base station as illustrated in the diagram. For reasons of safety, only use the power adapter plug and telephone connection line supplied.

¹ Visit www.switel.com to find out whether the telephone/telephone set is already available.


Preparing the Telephone

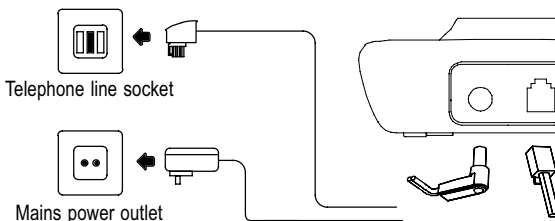

For the base station, use the power adapter plug labeled with No. VD060025J and output data 6 V, 250 mA.

Connecting the charging station¹

 Connect the charging station as illustrated in the diagram.




For safety reasons, only use the power adapter plug supplied.



For the charging station, use the power adapter plug labelled with No. VD060015D and output data 6 V, 150 mA.

Inserting the batteries

 Insert the batteries in the open battery compartment. Only use batteries of the type AAA NiMH 1.2 V. Pay attention to correct polarity. Close the battery compartment cover.

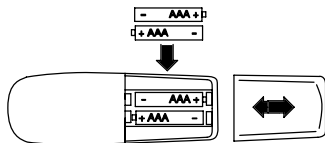

¹ Only applies to telephone sets with at least two handsets
“Checking the package contents” (Chapter 2).

Preparing the Telephone

Charging the batteries



Before the handset is used for the first time, insert it in the base station/charging station for **at least** 16 hours.

When the handset is properly inserted in the base station / charging station, you will hear an acoustic signal. The handset warms up during the charging process. This is normal and does not represent a risk. Do not charge the handset with charging units from other manufacturers. The current **battery charge status** is indicated in the display:



Full



Half empty



Low



Empty

Setting the display language

Select the language required (also refer to “Menu Structure”):



> SETUP MT > SPRACHE >...



> SETUP HS > LANGUAGE >...

Setting the time and date on the handset

The date and time are set using the menu (☞ Chapter 5).

Automatic answering

When the AUTO TALK function is activated, a call is automatically taken on removing the handset from the base station. The Auto Talk function is activated and deactivated using the menu (☞ Chapter 5).

Private branch exchanges

The information in Chapter 11 explains how to install your telephone in a private branch exchange.

Low-radiation operation (ECO mode)

In talk mode, radiation is reduced depending on the distance between the handset and base station.

 


3 Operating Elements

The buttons in this operating manual are subsequently depicted with a uniform contour. Therefore, slight deviations in the appearance of the symbols on the telephone buttons compared to those depicted here are possible.

Handset


- 1 Loudspeaker
- 2 LC display
(liquid crystal display)
- 3 Arrow button, upwards
Redialling
Increase receiver volume
- 4 Delete entries
Muting function
Ringing tone on/off
- 5 Phone book
- 6 Arrow button, downwards
Call log
Lower receiver volume
- 7 Digit keys
- 8 #-button
Key lock
- 9 R-button
- 10 Microphone
- 11 Handsfree button
- 12 *-button
Internal call
- 13 Call/On-hook button
- 14 Save/Confirmation/Menu button

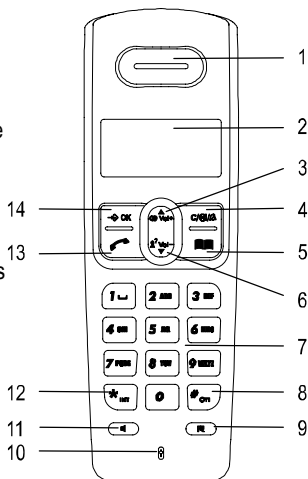

Preliminary Information

Base station

 - 1 Charging contacts
- 2 Paging button

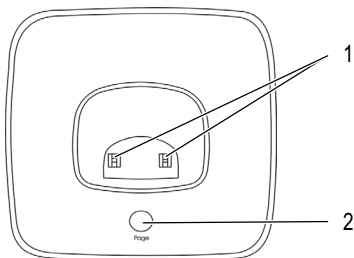

4 Preliminary Information

 




 



 



This chapter provides basic information on using the operating instruction manual and the telephone.

Description of operating sequences in the manual

Display	Description
	Displays the contour of buttons
	Press the button depicted briefly
2 sec.	Press the button depicted for 2 seconds
	Press any button briefly
	Enter digits or letters
	Handset rings
	Remove the handset from the base station
	Place the handset in the base station
	Depicts text in the display
	Depicts icons in the display



Preliminary Information

Icons and texts in the handset display

 
 
Icon	Description
	On: Indicates the battery charge status. Flashing: The batteries must be charged. Run-through segments: The batteries are being charged.
2	Internally assigned call number of the handset.
04/07 12:20	Display of date and time.
	On: An external call is currently being made. Flashing: An external call has been received.
INT	On: An internal call is currently being made. Flashing: An internal call has been received.
	On: The call log is open.
 	There are more digits to the left or right of the phone number displayed. Press the  or  button to show them.
	The ringing tone has been switched off.
	The alarm function is enabled.
	The key lock is activated.
	You have accessed the menu.
	The phone book is open.
	Answering machine provided in the telephone network. VMWI ¹ - Supplementary service of your telephone network provider (☎ Chapter 11).

¹ **VMWI**: **V**isual **M**essage **W**aiting **I**ndication = Visual indicator that new messages have been recorded.

Preliminary Information












 

	The microphone has been muted.
	On: The connection to the base station is good. Flashing: The connection to the base station is interrupted. Move nearer to the base station.

Standby mode

All descriptions in this operating manual assume that the handset is in Standby mode, which is the case when you are not talking on the phone and if a menu is not open. Press the  or  button to enable Standby mode.

Navigating in the menu

All the functions can be accessed via the various menus. Refer to the menu structure to find how to access the respective functions.




 
	Open the main menu
 or 	Select a submenu
	Open the submenu
 or 	Select a function
	Open the function
 or 	Select a setting
	Use the digit keys to enter numbers or letters
	Confirm the input
	Move one level back
	Cancels all programming and saving and returns the handset to Standby mode



Every process is automatically cancelled if there is no input within 30 seconds.

5 Menu Structure

Main menu

Press the  button to access the main menu. Then use the  or  button to select an entry and confirm it by pressing the  button.

SETUP HS	RING MELODY	MELODY 1...10
	RING VOLUME	1...5
	TONES	LOW BATTERY ON
		OFF
		NO COVERAGE ON
		OFF
		KEY TONE ON
		OFF
	AUTO TALK	ON
		OFF
	ALARM	ON TIME
		OFF
	NAME	
	LANGUAGE	DEUTSCH, FRANCAIS, ITALIANO, ENGLISH
	RESET	RESET?

Menu Structure

SETUP BS	CHANGE PIN ¹	ENTER PIN	NEW PIN ↘
			↘ REPEAT PIN
	RING MELODY	MELODY 1...5	
	RING VOL.	1...5	
		OFF	
	DIAL MODE	TONE	
		PULSE	
	RECALL TIME	100MS ... 800MS	
	VMWI	VMWI OFF?	
	RESET	ENTER PIN	RESET?
DATE/TIME	YEAR	DATE	TIME
REGISTRATION	REGISTER	BASE 1...4 ²	ENTER PIN
	SEL BASE	AUTO	
		BASE 1...4	
	REMOVE HS	ENTER PIN	HANDSET 1...6

¹ The default PIN code is "0000".

² There are 4 memory locations available for registering base stations. Memory locations which flash have already been assigned. If a memory location is selected which is already assigned, the old registration in this memory location is overwritten.



6 Phone Book

You can use the phone book to store up to 25 phone numbers together with the associated names.

- Always enter the area access code with the phone numbers so that incoming local calls can also be assigned to a phone book entry.
- When the memory capacity is used up, the message **MEMORY FULL** appears when an attempt is made to store another number. To create space, an existing entry must first be deleted.
- The phone book entries are arranged alphabetically. To access the required phone book entry directly, press the first letters of the corresponding name.

Entering names





Letters are also imprinted on the digit keys. Letters, digits and special characters are entered by pressing the relevant key the respective number of times.

1	Enter a space
C	Delete characters
 or 	Moves the cursor



To enter the same letter twice, press the button to enter the letter. Wait until the cursor skips one position forwards. Enter the letter again.

Creating phone book entries

	Open the phone book
	Open the menu
 or  ADD NEW , OK	Select the submenu and confirm it

Phone Book



Enter the phone number
(max. 20 digits) and confirm it



Enter the name
(max. 20 characters) and confirm it

Editing phone book entries



 
Open the phone book



Select an entry



Open the menu



Select the submenu and confirm it



Change the phone number and
confirm it



Change the name and confirm it

Deleting phone book entries

Deleting an entry



Open the phone book



 
Select an entry



Open the menu



Select the submenu and confirm it



Confirm the deleting process or
cancel it

Deleting all entries



 
Open the phone book



Open the menu



Select the submenu and confirm it



Confirm the deleting process or
cancel it

7 Call Log

A total of 20 calls are stored in the call log.



The caller number display (**CLIP**¹) is a supplementary service offered by your telephone network provider. The caller's number appears in the display if the service is offered by your telephone network provider. Contact your network provider for further information.


Messages in the display:

UNAVAILABLE	<p>The phone number is received only partially or with errors.</p> <p>Information related to the phone number is not available. This could signify an international call.</p>
WITHHELD	<p>The caller has suppressed the transmission of their phone number.</p>

Displaying numbers in the call log



 Display the call log and select an entry









Press the  button, several times if necessary, to switch between the "Name", "Number" and "Received time" displays.

¹ **CLIP: Calling Line Identification Presentation** = Displays the caller's phone number.

Call Log

Storing a phone number in the call log in the phone book

A phone number in the call log can be stored in the phone book directly.







 ,  or 	Display the call log and select an entry
	Open the menu
 or  SAVE NUMBER ,	Select the submenu and confirm it
OK	
 , OK	Change the phone number, if necessary, and confirm it
 , OK	Enter the name (max. 20 characters) and confirm it




 


As soon as the phone number in the phone book has been saved together with a name, the name entered appears in the call log.

Deleting phone numbers from the call log

Deleting individual phone numbers





 ,  or 	Display the call log and select an entry
	Open the menu
 or  DELETE? ,	Select the submenu and confirm it
OK	
CONFIRM?	Confirm the deleting process or cancel it
OK or C	

Deleting all phone numbers

	Open the call log
	Open the menu
 or  DELETE ALL?	
OK	Select the submenu and confirm it
CONFIRM?	
OK or C	Confirm the deleting process or cancel it

8 Telephoning

Taking a call

, ,  or  Take the call

Ending a call

 or  End a call


Making a call

 Enter the phone number
(max. 20 digits)

C Delete the last digit if incorrect

 or  Dial the phone number



It is also possible to press the Call button  first to obtain the dialling tone for an outside line. The digits then entered are dialled immediately. It is not possible to correct wrong digits individually using this dialling procedure.

Telephoning

Redialling

The telephone stores the last 10 numbers dialled in a redialling list.



Open the redialling list and select an entry



Dial the number

Editing phone numbers in the redialling list is identical to editing phone numbers in the call log (☞ Chapter 7).

Calling back calls received

Your telephone stores the last 20 calls received in a call log.



Display the call log and select an entry



Dial the number

Dialling numbers from the phone book

Phone numbers must have been stored in the phone book for this function (☞ Chapter 6).



Open the phone book



Select an entry


















Dial the number

Chain dialling

Chain dialling is used to link and transmit numbers to make use of telephone services such as telephone banking, call-by-call or calling card procedures.


 


Open the phone book, call log or redialling list and select the numbers required in succession or link them with manually entered numbers. Any number of numbers can be transmitted from the lists when a connection has already been established and they can also be combined with manually entered numbers. An example of transmitting the predialling code of a call-by-call number is described below.

	Open the phone book
 or  , 	Select the call-by-call-number and transfer it
 or   	Select the menu option and confirm it then
	Open the phone book again
 or  ,  , 	Select the entry and dial the number or
 , 	Enter the phone number manually and dial it


 
Internal calls¹

Making internal calls

There must be two or more handsets (HS1, HS2, ...) registered on your base station in order to make internal calls free of charge.





HS1: 2 sec. 	Activate the internal call function
e.g. 	Dial the internal call number of the handset required
HS2: 	Other handset answers the call
HS1/HS2: 	End the internal call

¹ Internal calls are only possible when at least two handsets are registered in the system;

 "Checking the contents of the package" ( Chapter 2).

Telephoning

Forwarding external calls internally










HS1: 2 sec. 	Dial the internal handset number while making the external call
e.g. 	
HS2: 	Other handset answers the call
HS1: 	Forward the call



If the handset called does not answer, the external call is returned to the calling handset after 30 seconds.

Making conference calls

An external call can be transferred to another internal handset for a conference call.

HS1: 2 sec. 	Dial the internal handset number while making the external call
e.g. 	
HS2: 	Other handset answers the call
HS1: 	Open the menu
 or  	
	Start the conference call
HS1 / HS2: 	End the conference

Setting the receiver volume

The volume can be adjusted to one of 5 settings during a call.


 
 or 	Select a volume level
--	-----------------------

Displaying the duration of a call

The duration of a call is displayed in hours, minutes and seconds during the call.




Muting the microphone in the handset

The microphone in the handset can be activated and deactivated during a telephone conversation.

	Deactivate the microphone (muting on)
	Activate the microphone



Key lock

The key lock feature prevents functions assigned to buttons being activated accidentally.

2 sec. 	Lock the keys
	Incoming calls can still be taken in the normal way even when the key lock function is activated.
2 sec. 	Unlock the keys

 

 

Handset ringing tone

The handset's ringing tone can be switched off.

2 sec. 	Switch the ringer melody off
2 sec. 	Switch on the ringer melody on

Searching for the handset (Paging)

If you have mislaid your handset, you can sound a paging tone to find it.

Base station  , 	Sound the paging tone
 or 	Stop the paging tone

Extending the Telephone System

9 Extending the Telephone System

 
The internationally approved **GAP**¹ standard regulates the compatibility of handsets and base stations from different manufacturers. As a result, it is possible to integrate SWITEL devices and devices from other manufacturers together in one telephone system. It is possible, however, that some functions are not available.

Multiple handsets



Up to 6 handsets can be registered on the base station.

Registering handsets

Before starting to register a handset, switch the base station to Registration mode.

15 sec. 

 Activate Registration mode

Now register the handset ( Chapter 5). Use the current PIN code ( Chapter 5) to register the handset.

The handset is automatically assigned an internal call number following registration. The internal call number appears in the display.



To register handsets from other manufacturers, please refer to the operating manual supplied with them.

Deregistering handsets



A handset can only be deregistered from a base station by using another handset registered to the same base station.

Handsets are deregistered via the menu. Chapter 5 indicates the position in the menu.

¹ **GAP**: **Generic Access Profile** = Standard for the interoperation of handsets and base stations from different manufacturers.

Extending the Telephone System

Multiple base stations

You can increase the range of your handset by registering it on several base stations. The handset can be registered on up to 4 different base stations simultaneously. Each base station requires its own telephone line socket. Connections can be used with the same call number or with different ones.



Calls in progress cannot be transferred from one base station to another.

Increasing the range

Position the base stations so that the ranges of the individual base stations overlap. Test the ranges of the handsets because obstructions in buildings restrict the range. Register the handset on all the base stations. Activate the **AUTO** function on the base station (☞ Chapter 5). The handset then automatically searches for the nearest base station with the best connection.

Mobility through registration at various locations

Register the handset on various base stations at different locations. Activate the **AUTO** function on the base station (☞ Chapter 5). Regardless of your current location, the handset automatically searches for a base station within range.

Special Functions

10 Special Functions

Dialling mode


The telephone can be operated in analogue exchanges (PULSE mode) as well as new, digital exchanges (TONE/DTMF mode). The dialling mode is controlled via the menu. Chapter 5 indicates the position in the menu.

11 PABX / Supplementary Services

R-button on private branch exchanges

If the telephone is connected to a private branch exchange, functions such as transferring calls and automatic call back can be used via the **R button**. Refer to the operating manual provided with your private branch exchange as to which Recall (Flash) time must be set in order to use these functions. The sales outlet where you purchased the exchange can provide information as to whether the telephone will work properly with the exchange. The Flash time is set using the menu. Chapter 5 indicates the position in the menu.

Dialling pause

When using private branch exchanges, it is necessary to dial an access code to obtain the dialling tone for an outside line. When using some older private branch exchanges, it takes a little time before the dialling tone becomes audible. In the case of such private branch exchanges, a dialling pause can be inserted after the number for an outside line in order to continue dialling directly without having to wait for the dialling tone. Insert the dialling pause by pressing and holding the  button.

The actual phone number is dialled a certain time after the number for an outside line.



The dialling pause can also be entered with the phone numbers in the phone book [phone number memory].

PABX / Supplementary Services

R-button and supplementary services

Your telephone supports supplementary services provided by your telephone network provider, such as brokering, call waiting and conference facilities. These supplementary services can be used by implementing the **R button**. Please contact your telephone network provider regarding which Flash time must be set to use the supplementary services. Contact your telephone network provider with regard to enabling supplementary services. The Flash time is set using the menu. Chapter 5 indicates the position in the menu.

Caller number display (CLIP¹)



The caller number display (CLIP) is a supplementary service offered by your telephone network provider. Contact your network provider for further information.

If this function is available with your telephone line, the number of the caller appears in the display when the phone rings. If the caller has suppressed transmission of his phone number, the corresponding message appears in the display. The phone number is not displayed and, as a result, is not stored in the call log.

Answering machine in the telephone network

An answering machine in the telephone network is a supplementary service offered by many telephone network providers. If your telephone network provider offers an answering machine in the telephone network for you, an icon on the display informs you of new messages received (**VMWI²**). This function can only be used when your telephone network provider actually offers the service. Contact your network provider for further information.

¹ **CLIP: Calling Line Identification Presentation** = Displays the caller's phone number.

² **VMWI: Visual Message Waiting Indication** = Visual indicator that new messages have been recorded.

Starting the Picture Frame

12 Starting the Picture Frame

Safety information




Attention: It is essential to read the Safety Information in Chapter 1 before starting up.

Connecting the picture frame



Attention: Position the picture frame at least 1 m away from other electronic devices, otherwise there is a risk of mutual disturbance.

Connect the picture frame as illustrated in the diagram. For safety reasons, only use the power adapter plug supplied.

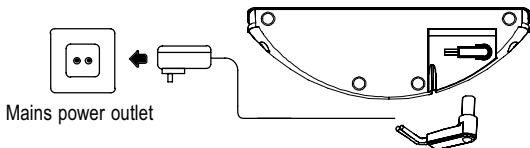 

When connecting the picture frame, use the power adapter plug labelled with output data 6 V, 1500 mA and No. KSS12_060_1500G, SSA-12W-05 EU 060150F.

Inserting the battery in the remote control

Open the battery compartment in the remote control. Follow the information imprinted on the rear side of the remote control. Insert the battery in the holder. Only use batteries of the type CR2025. Pay attention to correct polarity. Close the battery compartment.

Setting the picture frame language



Select the language required (refer to Page 32).

13 Operating Elements

The picture frame buttons illustrated in this operating manual are subsequently depicted with a uniform contour. Therefore, slight deviations in the appearance of the symbols on the picture frame buttons compared to those depicted here are possible.


Picture frame

  - 1 LCD display
- 2 Microphone
- 3 Infrared sensor
- 4 Quick access photo
- 5 Microphone muting function
- 6 On-hook button
- 7 Call button / R button
- 8 OK/Pause button
- 9 Stop/Back
- 10 Arrow button, right
- 11 Arrow button, upwards
Increase receiver volume
- 12 Menu button
- 13 Arrow button, left
- 14 Arrow button, downwards
Lower receiver volume
- 15 Loudspeaker
- 16 USB port
- 17 Memory card slot

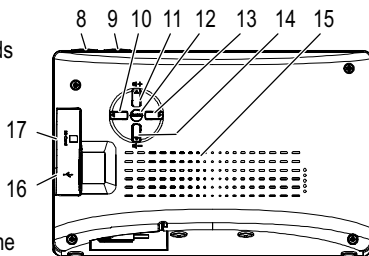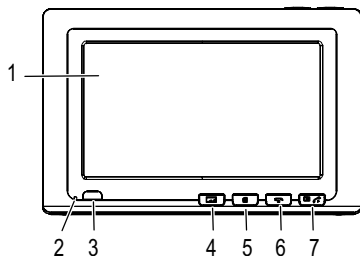

Operating Elements

 
Display

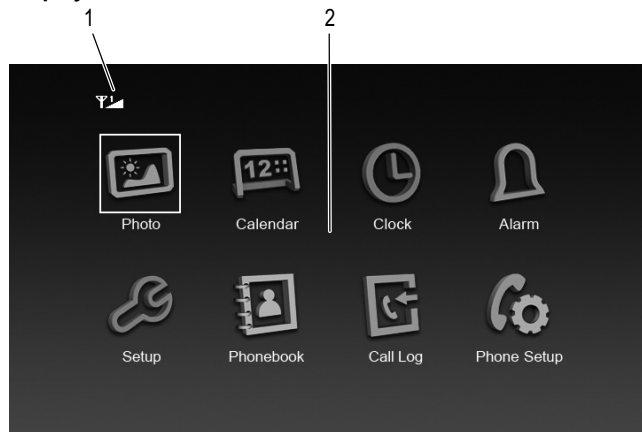

- 1 Displays the signal strength and the internally assigned number (handset number)
- 2 Main menu

Remote control

  
- 1 On/Off button
- 2 Arrow button, upwards
Increase receiver volume
- 3 Arrow button, right
- 4 Arrow button, downwards
Lower receiver volume
- 5 Skip to end
- 6 Stop/Back
- 7 Call button / R button
- 8 On-hook button
- 9 Microphone muting function
- 10 Skip to start
- 11 Arrow button, left
- 12 OK/Pause/Resume
- 13 Quick access photo
- 14 Menu button

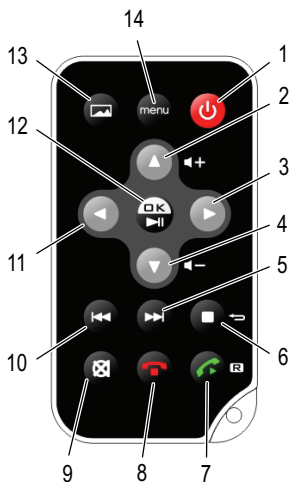












Preliminary Information


14 Preliminary Information

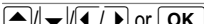Navigating in the menu

All the functions can be accessed via the various menus. Refer to Menu Structure,  Page 35, for information on how to access each respective function.



 




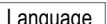





	Displays the main menu
 	Select the required menu and open it
	Select the submenu
 or 	Open the submenu
 or 	Change the setting
	and confirm, if necessary
	Move one level back
	Return to the main menu



Press the  button to cancel the programming process and return to Standby mode.

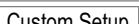 Examples

Setting the language¹

	Displays the main menu
  	Select the required menu and open it
  	Select the submenu and open it
 	Activate the list
  	Select the language and save it
	Return to the main menu

¹ The following languages are available for selection English, Francais, Deutsch, Italiano, Espanol, Portugues and Netherlands.

Preliminary Information

Creating a phone book entry with picture



To create a phone book entry, a storage medium (refer to Page 34) must be available containing the pictures/photos to be used.

MENU

Displays the main menu



Phonebook

OK

Select the required menu and open it



Add

OK

Select the submenu and open it



0

OK

Select the digits



4

OK

for the number



...

OK

and confirm them



Access name input



A

OK

Select the characters



b

OK

for the name and



...

OK

confirm



Save

OK

Save the entry

The memory card is read



OK

Select the picture, from a subfolder if necessary

Save

OK

Save the link from picture to entry

MENU

Return to the main menu



 







Only JPEG¹ files (*.jpg) can be added into the phonebook.

¹ JPEG = Joint Photographic Experts Group

Preliminary Information

Setting the transition effect for the slide show

	Displays the main menu
 Setup 	Select the required menu and open it
 Transition Effect 	Select the submenu and open it
 No Effect / Blind Vertical ... Fade in Fade out / Random 	Select the effect required and apply it
	Return to the main menu

Starting the slide show

	Displays the main menu
 Photo 	Pictures are displayed

Using the storage medium

In order to exploit the device fully, use USB sticks or memory cards.

- **Secure Digital Memory Card (SD)**
- **Multimedia Card (MMC)**
- **Memory Stick (MS)**

Save the pictures you want to use on a the relevant storage medium. Pay attention to the information provided by the storage medium manufacturers and the PC manual/guide.



The pictures/photos must have been saved in JPEG¹ (*.jpg) or BMP² format (*.bmp).

Insert the storage medium containing the required data in the memory card slot/USB port. Pay attention the storage medium is inserted and aligned properly. Refer to the illustration imprinted.




¹ **JPEG** = Joint **P**hotographic **E**xperts **G**roup

² **BMP** = **B**itmap



15 Menu Structure

Main menu

Press the **MENU** button to access the main menu. Then use the **▲**, **▼**, **◀** or **▶** buttons to select an entry and confirm your selection according to the situation, e.g. by pressing **OK**, **▶** or **Save**.





Photo			
Calendar	Display		
	Set Date		
	Exit		
Clock Setting	Display	Clock	
		Clock & Calendar	
	Set Time		
Alarm Setting	Enable	On	
		Off	
	Set Time		
	Exit		
Setup	Photo Setting	Interval Time	5 Sec. ...3 Min.
			Off
		Transition Effect	No Effect
			Blind Vertical
			Block 1 - 9
			Random
		Show Type	Fit Screen
			Full Screen

Menu Structure

	Browse	Thumbnail
		File Manager
Auto-play	Photo	On
		Off
Display Setup	Brightness	-7 ... +7
	Contrast	-7 ... +7
	Saturation	-7 ... +7
Custom Setup	Language	Deutsch
		... 1
	Style	Style1 ... 4
	Repeat Mode	Off
		One
		Folder
		All
	Factory Default	Confirmed
Exit		
Phonebook	Review	Edit 
		Delete
		Delete All
		Return
Add	Number/Name	
Exit		

¹ The following languages are available for selection: English, Francais, Deutsch, Italiano, Espanol, Portugues and Nederlands.

Menu Structure

Call log	All Calls	Add 
		Delete
		Delete All
		Return
	Missed Calls	Add 
		Delete
		Delete All
		Return
	Received Calls	Add 
		Delete
		Delete All
		Return
	Exit	
Phone Setup	Registration	PIN 
	Ring Pattern	Ring Pattern 1 ... 10
	Ring loudness	1 ... 9
		Off
	Exit	

Telephoning

16 Telephoning

When the picture frame is correctly registered on the base station, incoming calls are also indicated on the picture frame.



The picture frame can only indicate incoming calls but cannot be used to make calls.

When the call number is transmitted, it appears in the display.



The caller number display (**CLIP**¹) is a supplementary service offered by your telephone network provider. The caller's number appears in the picture frame if the service is offered by your telephone network provider.

If there is a corresponding phone book entry associated with the phone number, the name and linked picture/photo also appear.

Taking a call



Take the call



When the picture frame is used, Handsfree mode is always active.

Muting the microphone

The microphone in the picture frame can be activated and deactivated during a telephone conversation.



Deactivate the microphone



Activate the microphone

Setting the receiver volume

The volume can be set to one of 9 different levels.



Select a volume level

Ending a call



End the call

¹ **CLIP**: Calling Line Identification Presentation = Displays the caller's phone number.

17 Call Log

If calls are not taken on the picture frame, they are stored in the call log. A corresponding message appears in the display.

Displaying the call log



Open the call log (press any key)

Messages in the display:

UNKNOWN	The phone number is received only partially or with errors.
INTERNATIONAL	Information related to the phone number is not available. This could signify an international call.
PRIVATE	The caller has suppressed the transmission of their phone number.



The procedure to save calls stored in the call log in the phone book, to delete the call log and other function are explained in the Menu Structure; Page 37.

In Case of Problems

18 In Case of Problems

Service hotline

Should problems arise with the telephone, please refer to the following information first. In the case of technical problems, you can contact our hotline service, Tel. 0900 00 1675 within Switzerland (Swisscom fees at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, please contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems	Solutions
No connection to base station possible	<ul style="list-style-type: none">- Check that the handset has been registered on the base station with the correct PIN code; ➤ Chapter 5.
No telephone calls possible	<ul style="list-style-type: none">- The telephone is not connected properly or is defective. Only use the telephone connection cable supplied.- Test whether the telephone connection is in order by using another telephone.- The power adaptor plug is not plugged in or there is a complete power failure.- The rechargeable batteries are empty or defective.- The handset is too far from the base station.- The wrong dialling mode is set; ➤ Chapter 5.

In Case of Problems

Problems	Solutions
Connection is disturbed or cut off	<ul style="list-style-type: none">- The handset is too far from the base station.- The base station is in an unsuitable location.
The system no longer responds	<ul style="list-style-type: none">- Reset all the functions to their default settings; ➤ Chapter 5.- Disconnect the power adapter plug briefly from the power socket.
The batteries are empty within a short time	<ul style="list-style-type: none">- The batteries are empty or defective.- Place the handset in the base station properly. Clean the contact surfaces on the handset and base station with a soft, dry cloth.- Place the handset in the base station for 16 hours.

In Case of Problems

Problems	Solutions
The caller number display (CLIP ¹) does not function	<ul style="list-style-type: none">- The caller number display (CLIP) is a supplementary service offered by your telephone network provider. Contact your network provider for further information.- The caller has suppressed the transmission of their phone number.
No photos/pictures displayed in the picture frame	<ul style="list-style-type: none">- The storage medium is defect.- The storage medium is not installed.- There are no pictures/photos on the storage medium.- The pictures/photos have an invalid format.

¹ **CLIP: Calling Line Identification Presentation** = Displays the caller's phone number.

19 Technical Properties

Technical data

Feature	Value
Standard	DECT1-GAP²
Power supply (base station)	Input: 220/230 V, 50 Hz Output: 6 V, 250 mA
Power supply (charging station)	Input: 220/230 V, 50 Hz Output: 6 V, 150 mA
Power supply (picture frame)	Input: 100/240 V, 50/60 Hz Output: 6 V, 1500 mA
Range	Outdoors: Approx. 300 m Indoors: Approx. 50 m
Standby time	Up to 100 h
Max. talk time	Up to 10 h
Rechargeable batteries	2 x AAA NiMH 1.2 V
Dialling mode	Tone dialling mode Pulse dialling mode
Permissible ambient temperature	10°C to 30°C
Permissible relative humidity	20% to 75%
Recall (Flash) function	100 ms to 800 ms

¹ **DECT**: Digital Enhanced Cordless Telecommunication = Standard for cordless telephones.

² **GAP**: Generic Access Profile = Standard for the interoperation of handsets and base stations from different manufacturers.

Technical Properties

Default settings

The default settings can be restored via the menu.

LANGUAGE	DEUTSCH
RECALL TIME	100 ms
DIAL MODE	STONE
PIN	0000
MELODY	1
RING VOLUME	4
LOW BATTERY	ON
NO COVERAGE	ON
KEY TONE	ON
AUTO TALK	ON
ALARM	OFF

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5/EC directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE symbol on the device.



To view the complete Declaration of Conformity, please refer to the free download available on our web site www.switel.com.

20 Maintenance / Guarantee

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
- Do not use any cleaning agents or solvents.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply where the cause of equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defect parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the SWITEL device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

21 Index

A

- Alarm, 13, 44
- Answering machine in
the telephone network, 27

B

- Base station, 6, 25
- Battery charge status, 8

C

- Call back, 20
- Call log, 17, 39
- Caller number display, 17, 27
- Chain dialling, 20
- Charging, 8
- Charging station, 7
- CLIP, 27
- Conference calls, 22
- Creating, 15

D

- Date, 8
- Declaration of Conformity, 44
- Default settings, 44
- Deleting, 16, 18
- Deregistering, 14
- Deregistration, 24
- Dialling, 20
- Dialling mode, 14, 26
- Dialling pause, 26
- Display, 11
- Display icons, 11
- Display language, 8
- Display messages, 17, 39

E

- ECO mode, 8
- Editing, 16
- Ending a call, 19, 38
- Entering names, 15
- Entering text, 15
- Examples, 32
- Extending, 24

F

- Forwarding calls, 22
- Functions, 26

G

- Guarantee, 45

H

- Handset, 24

I

- Icons, 11
- Inserting the batteries, 7
- Inserting the battery, 28
- Internal calls, 21

K

- Key lock, 23

L

- Linking numbers, 20
- Low-radiation, 8

M

- Main menu, 13, 35
- Maintenance , 45
- Making a call, 19
- Menu structure, 13, 35
- Messages, 17, 39
- Muting, 23, 38
- Muting button, 23, 38

N

- Notation, 10

O

- Operating elements, 9, 29
- Operation, 10, 32

P

- Package contents, 6
- Paging, 23
- Phone book, 15, 20
- Phone book entries, 15
- Phone book entry, Picture, 33
- Picture frame, 28
- Picture frame language, 28
- Private branch exchanges, 26
- Problems, 40
- Problems and solutions, 40
- Pulse dialling mode, 14, 26

R

- R-button, 26, 27
- Range, 25
- Receiver volume, 22, 38
- Redialling, 20
- Registering, 14, 24
- Replace receiver, 19, 38
- Reset, 13
- Ringling melody, 13
- Ringling tone, 23

S

- Safety information, 4
- Saving, 15
- Searching for the handset, 23
- Service-Hotline, 40
- Standby mode, 12
- Starting up, 6, 28
- Storage medium, 34
- Storing, 18
- Supplementary services, 26

T

- Taking a call, 8, 19, 38
- Talk time, 22
- Technical data, 43
- Telephoning, 19, 38
- Time, 8
- Tone dialling mode, 14, 26
- Troubleshooting, 40

V

- VMWI, 27

SWITEL

Declaration of Conformity



Diese Anlage entspricht der europäischen R&TTE Richtlinie.
Für die komplette Konformitätserklärung nutzen Sie bitte den kosten-
losen Download von unserer Website www.switel.com.

Cet équipement est conforme à la directive européenne R&TTE.
Pour obtenir la déclaration de conformité intégrale, veuillez vous servir
du téléchargement gratuit de notre site Internet www.switel.com.

Quest'apparecchiatura è conforme alla direttiva europea R&TTE.
Per la dichiarazione di conformità completa si prega di voler usufruire
del servizio gratuito di download dal nostro sito Internet www.switel.com.

This equipment complies with the European R&TTE directive.
To view the complete Declaration of Conformity, please refer to the free
download available at our web site: www.switel.com.

Service Hotline

Bei technischen Problemen können Sie sich an unsere Service-Hotline
unter Tel. 0900 00 1675 innerhalb der Schweiz (Kosten Swisscom bei
Drucklegung: CHF 2.60/min) wenden.

S'il s'agit de problèmes techniques, vous pouvez vous adresser à notre
hotline de service en Suisse en appelant le numéro 0900 00 1675 (frais
Swisscom à la date d'impression de ce manuel : CHF 2.60/min).

In caso di problemi tecnici è possibile rivolgersi alla nostra hotline di
assistenza tecnica chiamando al numero 0900 00 1675 valido per la
Svizzera (spese da rete Swisscom alla data di stampa: CHF 2.60 / min).

In the event of technical problems, you can contact our hotline service,
Tel. 0900 00 1675 within Switzerland (cost via Swisscom at time of
going to print: CHF 2.60/min).