

# **SWITEL**

**SWISS BRAND** 

**Mobile Phone**

**M350**



**Operating Instructions**

# ***SWITEL***

Operating Instructions . . . . . 3

Declaration of Conformity . . . . . 95

## **HAC Hearing Aid Compatible to M3 / T3 Rating**

The M350 Phone has a built in Induction Coil and is hearing aid compatible.

To ensure optimum benefit, users with hearing aids may wish to select the T setting on their hearing aids.

## **Contents**

---

1	Quick Start Guide . . . . .	4
2	At a Glance . . . . .	16
3	How does it work . . . . .	20
4	Getting Started . . . . .	24
5	Phone Book Set Up . . . . .	29
6	Making and Receiving Calls . . . . .	35
7	Calls List . . . . .	39
8	SMS - Text Messages . . . . .	40
9	Voice Mail . . . . .	45
10	Other Useful Features . . . . .	47
11	SIM Tool Kit . . . . .	67
12	Menu Structure . . . . .	68
13	Trouble Shooting . . . . .	77
14	Technical Properties . . . . .	80
15	Safety Information . . . . .	84
16	Maintenance / Guarantee . . . . .	89
17	Index . . . . .	91

# Quick Start Guide

---

## 1 Quick Start Guide





Important: Before you start, please read the safety information on page 84.

### Quick Glance

- 1 LED
- 2 Earpiece
- 3 Display
- 4 Navigation keys (scroll up/down)
- 5 Softkey, left
- 6 Call key
- 7 One-touch dialling keys
- 8 Star key / Ringer On/Off - Silent Mode
- 9 Softkey, right
- 10 On/Off key / End call key
- 11 Keypad
- 12 Hash key
- 13 Microphone
- 14 Charge contacts
- 15 Mini USB socket
- 16 Headset socket (Headset not supplied)

# Quick Start Guide

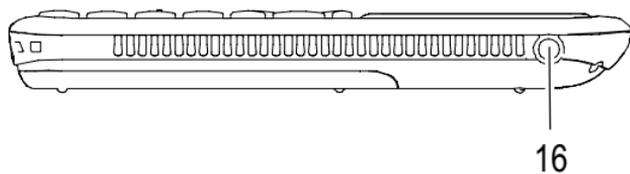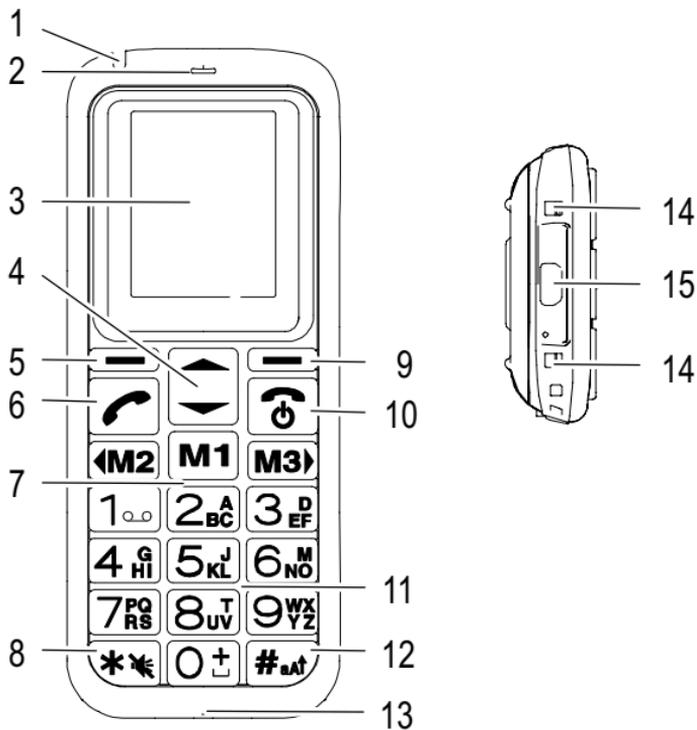

# Quick Start Guide

---

## What is in the box

The package contains:

1 mobile phone

1 desktop charging unit

1 li-ion battery

1 operating manual

1 charging cable

## Installing the SIM card



Risk of swallowing small objects!

The SIM card can be removed.


Small children can swallow them.

Switch the phone off.



Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Slide the mobile phone's battery compartment cover towards the bottom using a little force. Lift the battery compartment cover off the phone completely.

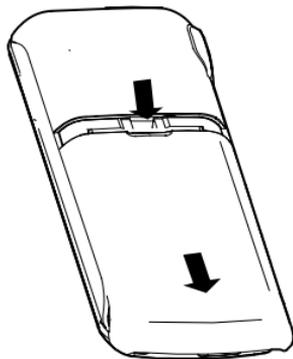


If there is already a battery inside, remove it.

## Quick Start Guide




Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

Slide the SIM card with the golden contacts facing down in the SIM card holder provided for it at the top right. The SIM card must be located under the metal retaining bar to be in the correct position.

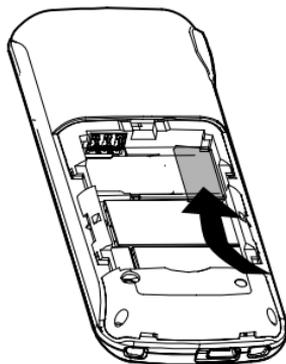


Insert the battery. The golden contacts on the battery must face towards the top left. Press lightly on the bottom end of the battery until it snaps into place.

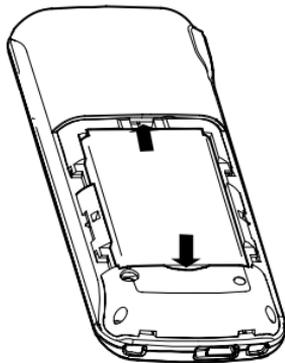

## Quick Start Guide

Replace the battery compartment cover back on the phone. Slide the battery compartment cover upwards until it snaps in to place.

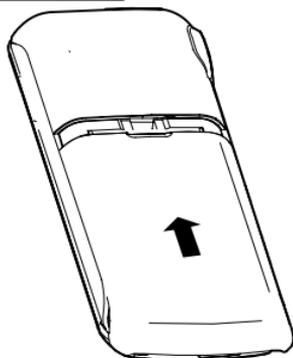

## Charging the battery



Before starting to charge the battery, check that it has been installed properly.

Do not remove the battery while it is being charged. This could damage the phone.



When charging the battery for the first time, it should be charged for **at least** 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.


## Charging via the mini USB socket

Plug the power adapter in the mini USB port.




## Quick Start Guide

Connect the power adapter plug as illustrated in the diagram. For safety reasons, only use the power adapter plug supplied.

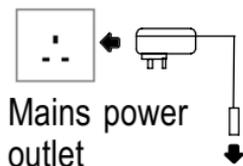

### Charging via the desktop charging unit

Plug the power adapter in the mini USB socket on the charging unit. Insert the phone in the charging unit to charge it.

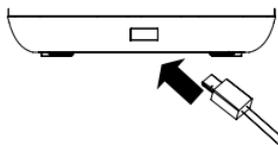

 The display will go blank but even so the battery is still being charged. This is correct operation.

 It may take a few seconds before the phone indicates the charging process. You can use the phone during the charging process.

### Battery status warning

The current **battery charge status** is indicated in the display as follows:



Full



Half empty



Low



Empty

## Quick Start Guide

---

When the battery charge is low, a corresponding warning message appears in the display.



Charge the battery.

In cases where the battery charge is extremely low, it is possible that the back-lighting no longer works and certain functions are no longer available.

When the battery charge drops below the minimum status, the phone switches off automatically.

### Switching the mobile phone on and off

---

3 sec.



Switch the mobile phone on

3 sec.



Switch the mobile phone off



Some SIM cards will require you to enter a PIN code. Follow the prompts on the screen or read more details about PIN & PIN2 on Page 58.

### Make sure you are in range of your Network

Some networks offer better coverage than others in different areas. The icon  indicates you have a signal and are connected to the network. The network will also appear in the display.

### Setting the display language

If you want to select a different language please refer to Page 50.

The following languages are available: German, English, French and Italian.

### Setting the time and date

Refer to Page 49.

### Setting the loudest Ringer

Refer to Page 60.

**Now you are ready to make and receive calls.**

### Taking a call



Take the call

### Rejecting a call



Reject the call

### Ending a call



Ending a call (on-hook)

### Making a call



Enter the phone number

Clear

Delete the last number if incorrect



Dial the phone number

# Quick Start Guide

## Advanced Settings and Functions

For more details about setting up your Switel M350 and other functions follow the descriptions in this user guide.

Examples;

- Set your one-touch dialling keys;  Page 47.
- Store numbers in the phone book;  Page 26.
- Use the Index;  Page 91.

 If you have any questions please call the Service-Hotline: Tel. 0900 00 1675 within Switzerland (cost via Swisscom at time of going to print: CHF 2.60/min).

## Questions and Answers

 In the majority of cases your M350 phone is supplied without a SIM card. You may find the following “**Questions and Answers**” (Q & A) helpful.

**Q** - Why hasn't the mobile phone been supplied with a SIM card?

**A** - Many people already have a mobile phone and wish to transfer their existing SIM card over to the new phone. This has the advantage of keeping the same telephone number and if the card is subscribed to a Pay-as-you-go service then you also benefit from being able to carry over any credit that has been paid the card.

## **Quick Start Guide**

---

**Q** - Where can I get a SIM card from?

**A** - Any high street mobile phone shop will be able to provide you with a SIM card. Some of the major supermarket chains also provide mobile phone services and can supply a SIM card. A useful tip when choosing a SIM card / service provider however is to make sure that you have adequate signal coverage at home; this particularly important if you live in a very rural area.

**Q** - Why doesn't the Switel mobile phone have a telephone number?

**A** - The telephone number is supplied by the service provider and will be registered onto the SIM card.

**Q** - Can I use the SIM card from my old mobile phone?

**A** - Yes as long as the SIM card is less than three years old you can transfer the card over. Some old SIM cards however are not compatible with the Switel mobile phone as they are from an earlier generation of SIM card design.

**Q** - Can I use a SIM card from any mobile phone company?

**A** - Yes. The Switel mobile phone is what is termed as an open SIM card phone and so it is not restricted to any particular service provider or mobile phone company.

## Quick Start Guide

---

**Q** - How do I pay for my calls?

**A** - There are two main types of registration with a service provider or mobile phone company. One is a contract - this is where you sign up for agreed contract over several months / year and pay an agreed monthly fee. This is more suited to people who are using their mobile phone as part of their job for example. The other is Pay-as-you-go, sometimes abbreviated to PAYG. With this type of service you add credit to the card and top up as and when required. Topping up the card is easy, you can do this over the phone, on-line, at many shops and even some cash points allow you to do this. PAYG is more suited to less frequent users.

**Q** - How do I find out my credit balance?

**A** - The service provider of the SIM card should have provided an information pack with the card. This will give details of a short number to dial in order to check your balance. These access codes differ between mobile phone companies so please check the details specific to your service provider. Key in your number, press the talk button and the credit balance will be announced to you.

Notes



## **At a Glance**

---

### **2 At a Glance**

#### **Keys and Parts**

- 1 LED
- 2 Earpiece
- 3 Display
- 4 Navigation keys (scroll up/down)
- 5 Softkey, left
- 6 Call key
- 7 One-touch dialling keys
- 8 Star key / Ringer On/Off - Silent Mode
- 9 Softkey, right
- 10 On/Off key / End call key
- 11 Keypad
- 12 Hash key
- 13 Microphone
- 14 Charge contacts
- 15 Mini USB socket
- 16 Headset socket (Headset not supplied)

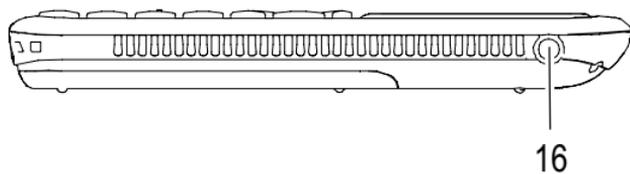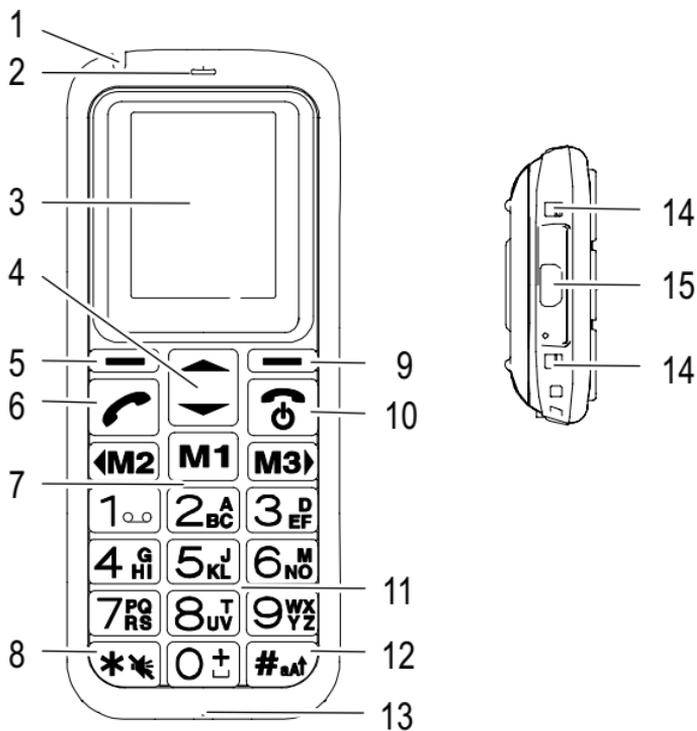

## At a Glance

### Icons and texts in the handset display

Icon	Description
	Displays the battery capacity. Running-through segments : the battery is being charged.
	Charge the battery.
	Signal strength of the phone connection.
	Alarm is activated.
	A headset is connected.
	The key lock function is activated; ☞ Page 37.
	A roaming <sup>1</sup> call is in progress.
	Call forwarding is active.
	There are new calls in the call list; ☞ Page 39.

<sup>1</sup> Cost of roaming calls and SMS will vary considerably from country to country. Check with your Operator.

## At a Glance

	A new <b>SMS</b> <sup>1</sup> text message has been received;  Page 40.
	SMS text memory is full;  Page 44.
	Ringing tone only is activated
	Vibration alert only is activated
	Vibration alert and ringing tone are activated
	The volume is set high and care should be taken when using the phone.

<sup>1</sup> **SMS: Short Message Service** = Service for sending text messages.

## How does it work

---

### 3 How does it work

---

1 LED Indicates the phone operating status. The LED will stay on while charging and will flash if no signal is detected or no network to be clamp on to alert the user.

---

2 Earpiece The voice of the caller can be heard here when no headset is being worn and the device not set to Handsfree mode.

---

3 Display The information which appears in the display guides you through the menu structure and helps operate the mobile phone.

---

4  Navigation keys Use the Navigation keys to scroll through the menus and select settings.

## How does it work

---

- 5  Softkey, left      The softkeys are assigned different functions in the various menus. The function currently assigned is always indicated by a word in the display directly above the softkey.
- 
- 6  Call key      Take a call or dial a number.  
Redial.
- 
- 7    One-touch dialling keys  
A phone number can be assigned to each one-touch dialling key and then dialled directly by pressing and holding the respective key.  
In addition:  
  = Scroll left/right, e.g. to program settings in the Alarm menu.
- 
- 8  Star key      Enter special characters.  
Ringer On / Off - Silent Mode

## How does it work

---

- 9  Softkey, right The softkeys are assigned different functions in the various menus. The function currently assigned is always indicated by a word in the display directly above the softkey.
- 
- 10  On/Off key, End call key  
Switch the mobile phone on and off.  
Cancel the current process.  
End or reject a call.
- 
- 11 - Keypad Enter phone numbers and names or write a text.
- 
- 12  Hash key Activate the key lock.  
Switch between upper/lower case and numbers.
- 
- 13 Microphone Is activated during a call.
- 
- 14 Charging contacts The phone is charged via these contacts when in the charging unit.
- 
- 15 Mini USB socket For connecting the power adapter plug.

## How does it work

---

- 16  Headset socket (Headset not supplied)  
Connect a headset.  
The earpiece, loudspeaker and microphone are deactivated. You can only hear and speak via the headset.

## Special Function Keys

Mode	Press and hold 	Press and hold 
Standby	Ringer On / Off - Silent Mode	Activate the key lock

This icon  will appear in the display.

---


Press and hold  A connection is established to your mailbox and you can listen to your messages;  
 Page 45.

# Getting Started

## 4 Getting Started

This chapter provides basic information on using the operating instruction manual and the telephone.

### Description of operating sequences in the manual

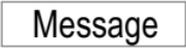Display	Description
	Press the key depicted briefly
2 sec. 	Press the key depicted for 2 seconds
Hold 	Press and hold down the key depicted
	Enter numbers or letters
	Mobile phone rings
	Represents text in the display
	Indicates icons in the display
	Press the softkey;  Page 25

### Standby mode

All descriptions in this operating manual assume that the mobile phone is in Standby mode. The system is switched to Standby mode by pressing the  key, several times if necessary. It may be necessary to deactivate the key lock function.

## Energy-save mode

When the phone has been in Standby mode for some time, it automatically switches to energy-save mode. The display no longer lights up. Press any key to reactivate Standby mode.

## Softkeys

The  and  softkeys are assigned different functions in the various menus. The softkeys are always referred to in this manual according to the word directly above them in the display.

Key	In Standby mode	In a menu
 left	- Open the main menu	- Various functions
 right	- Open the phone book	- Various functions

## Navigating in the menu

All the functions can be accessed via the various menus. Refer to Menu Structure,  Page 68, for information on how to access each respective function.

	Open the main menu
	Select the submenu required
	Open the submenu
	Select the function required

## Getting Started



---

	Open the function
 /  	Select the setting required
	Use the keypad to enter numbers or letters
 (left)	Confirm the entries
 (right)	Move one level back
	Cancel the programming and saving processes and return to Standby mode

### Creating phone book entries - example

The way in which to navigate through the menus and define settings is explained by means of the example **Creating phone book entries**. Proceed as in this example for all the settings.

---

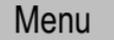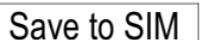	Open the main menu
 /   	Select the phone book (Contacts) and confirm it
 /   	Select the submenu and confirm it
 /   or  	

## How to enter text and numbers

Select the memory location and confirm it



Enter the name and confirm it



Enter the number and confirm it

## How to enter text and numbers

The keypad is labelled with letters for the entry of text.

The phone provides various methods by which text can be entered. These are used when creating or editing contacts in the phone book, when searching for names in the phone book and when writing SMS text messages.



Not every method is always available for each application.

## Methods of entering text

### Multitap

In order to enter text in Multitap mode, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key once. If the second character is required, press it twice, and so on.

## How to enter text and numbers



To enter two characters assigned to the same key, press the key the respective number of times to enter the first character. Then wait for approx. 2 sec. and enter the second letter.

A B C	Multitap upper case
a b c	Multitap lower case
A B C	The first character of a new sentence will be upper case and the rest is lower case.
1 2 3	Numbers



To switch between the text and numbers, press the key.

### Punctuation and special characters

When in Editing mode, press the key. Punctuation marks and special characters are displayed. Use the / and / keys to select the required character and insert it by pressing the **OK** softkey. A wide range of frequently used special characters are available when editing by repeatedly pressing the key.

### Other entries and functions

	Enter a space
Delete	Delete character
/	Move the cursor

### 5 Phone Book Set Up

The phone book in the phone can store up to 200 entries.

- Always enter the area code and country codes with all the phone numbers.
- When the memory capacity is used up, the corresponding message appears when an attempt is made to store another entry. Before new entries can be stored, old entries must be deleted.
- The phone book entries are arranged alphabetically. To skip directly to a required phone book entry, press the corresponding first letter. To search for the entries manually, use the  /  keys.



Your provider can state how many entries you can store on your SIM card.

### Entering names

The keypad is labelled with letters for the entry of names. Press the corresponding key the respective number of times to enter letters. Information on ways of entering text;  Page 27.

# Phone Book Set Up

---

## Creating phone book entries

See  Page 26.

## Saving in Standby mode

---

 Enter the phone number

---

**Options** Open the Options menu

---

 /  **Save number** **OK**  
Start the saving process

---

 /  **Save to SIM** or  
**Save to phone** **OK**  
Select the memory location and confirm it

---

 **OK** Enter the name and confirm it

---

 **OK** Edit the number and confirm it

---

## Modifying, editing, deleting phone book entries

---

**Menu** Open the main menu

---

 /  **Contacts** **OK**  
Select “Contacts” and confirm it

---

 /  **View contacts** **OK**  
Select the submenu and confirm it

---

Search for the required entry as described at the beginning of this chapter.

## Phone Book Set Up

---

<b>Options</b>	Open the Options menu
----------------	-----------------------

---

The following functions can be used:

<b>View</b>	View/Edit the entry
<b>Send SMS</b>	Send the SMS text
<b>Add to group</b>	Assign the number to a group
<b>Copy to phone</b>	Copy the entry (SIM → phone)
<b>Copy to SIM</b>	Copy the entry (phone → SIM)
<b>Call</b>	Dial the entry
<b>Delete</b>	Delete the entry

Execute the functions and then confirm them.

### Copying or deleting all entries

---

<b>Menu</b>	Open the main menu
-------------	--------------------

---

 /  <b>Contacts</b>	<b>OK</b> Select "Contacts" (phone book) and confirm it
---	--

---

 /  <b>Advance</b>	<b>OK</b> Select the submenu and confirm it
--	--

---

 /  <b>Copy all</b>	<b>OK</b> Copy entries (SIM or phone)
---	---

## Phone Book Set Up

---

 /  Delete all contacts 

Delete all the entries  
(SIM or phone)


Execute the functions and then confirm them.

### Groups

You can assign the entries to various groups. These groups can then be allocated different ringing melodies.

Assigning an entry to a group

---

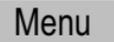 Open the main menu

---

 /  Contacts 

Select "Contacts" and confirm it

---

 /  View groups 

Select the submenu and confirm it

---

 /  Friends 


Select the group and confirm it

---

 /  Group member 

Open the list

---

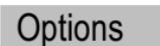  /  Add member 

Initiate adding a member

## Phone Book Set Up

 /  **Add**      Select an entry from the list and add it

 All the entries stored in the phone are then displayed. Entries which are stored on the SIM card are not displayed and cannot be selected! Copy the entries from the SIM card to the phone as necessary;  Page 30.

### Editing group names

**Menu**      Open the main menu

 /  **Contacts** **OK**      Select the menu and confirm

 /  **View groups** **OK**      Select the menu and confirm

 /  **Friends** **OK**      Select the group and confirm it

 /  **Rename** **OK**      Initiate renaming

**Delete**      Delete the existing group name letter-by-letter

 **Save**      Enter the new group name using the keypad and then confirm it

# Phone Book Set Up

---

## Changing the ringer for groups

---

**Menu** Open the main menu

---

 /  **Contacts** **OK**  
Select “Contacts” and confirm it

---

 /  **View groups** **OK**  
Select the submenu and confirm it

---

 /  **Friends** **OK**  
Select the group and confirm it

---

 /  **Alert tone** **OK**  
Open the menu

---

 /  **OK**  
Select the ringer and confirm it

## Making and Receiving Calls

### 6 Making and Receiving Calls

#### Taking a call



Take the call

#### Rejecting a call



Reject the call

#### Ending a call



or **End**

Ending a call (on-hook)

#### Making a call



Enter the phone number

**Clear**

Delete the last number if incorrect



Dial the phone number

#### Call list

Your mobile phone stores the last numbers dialled (**redialling**) as well as **calls** received and missed in a call list.



Open the call list



Select a calls list



Select the entry and dial it

#### Dialling numbers from the phone book

You must have already stored phone numbers in the phone book;  Pages 26.

**Contacts**

Open the phone book

## Making and Receiving Calls

---



Select the entry and dial it



To skip directly to an entry, use the keypad to enter the first letters of the name stored. If necessary, you must press a key several times in order to enter the respective letters.

### One-touch dialling keys

You must have already assigned phone numbers to the one-touch keys;  Page 47.


---

3 sec. **M1**, **M2** or **M3**

Press and hold the one-touch dialling key

### Setting the receiver volume

The volume can be adjusted during a call.

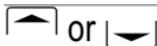

Select a volume level



Exposure to the receiver at full volume for a long period could cause ear damage.

### Talk time display

The duration of a call is displayed in hours, minutes and seconds during the call.

### Handsfree

This function is used to listen to the caller via the loudspeaker.

While a call is in progress

---

H/free

Activate the handsfree facility

## Making and Receiving Calls

---

Normal	Deactivate the handsfree facility
--------	-----------------------------------

### Muting the microphone in the handset

The microphone in the handset can be activated and deactivated during a telephone conversation.

---

Options	Open the menu
---------	---------------

---

 / 	Mute
---	------

OK	Deactivate the microphone (muting function activated)
----	---

---

Unmute	OK	Activate the microphone
--------	----	-------------------------

---

### Keypad lock

The keypad lock is intended to prevent functions being triggered unintentionally.

---

3 sec.		Activate the key lock function
--------	---	--------------------------------

 Calls can still be taken in the normal way even when the key lock function is activated.

Unlock	and then 	immediately	Deactivate the key lock function
--------	--	-------------	----------------------------------

### Turn ringer Off/On

The ringer can be set to silent - vibrate only.

---

3 sec.		Switch the ringer off
--------	---	-----------------------

---

3 sec.		Switch the ringer on
--------	---	----------------------

## Making and Receiving Calls

---

When you have set the ringer "Off" you will notice this icon  in the display.

Deactivating the ringer for the current call

---

Options Mute OK

Switch off the ringer



The ringer is automatically activated for the next incoming call.

## Options during a call

---

Options Open the "Options" menu

This menu provides access to functions which can be executed during a call:

Hold

---

 /  Hold OK

Put the current call on hold



When a call is put on hold, the menu option changes to "Unhold".

Take back the call previously put on hold:

---

 /  Unhold OK

Resume the call

Contacts (phone book)

---

 /  View contacts OK

Open the phone book and view the entries

## 7 Calls List

The mobile phone is equipped with a calls list. Your mobile stores the last phone numbers dialed, taken and received but missed.

 If one of the phone numbers received matches an entry in the phone book, the associated name appears.

### Dialling from the calls list

	Open the calls list
 M2 / M3 	Select a calls list
 /  	Select an entry and dial it

### Displaying list details

Open the calls list.

 /  <b>Options</b>	Select an entry and open the Options menu
--	---

The following functions are available:

<b>Call</b>	Dial the entry
<b>Send SMS</b>	Send the SMS text
<b>Delete</b>	Delete the entry
<b>Save number</b>	Save the entry
<b>Delete all</b>	Delete the entire call list
<b>Show number</b>	Display the telephone number

## SMS - Text Messages

---

### 8 SMS - Text Messages



It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details.


### SMS settings



The distribution of text messages is performed via a Service Center (**SMSC**)<sup>1</sup>. If you want to send and receive text messages, you must program a Service Center number in your phone. Normally, this has already been set up by your service provider.

Menu

Open the main menu

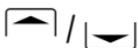

Message

OK

Select the menu and confirm it



Message settings

OK

Select the submenu and confirm it

<sup>1</sup> **SMSC: Short Message Service Center** = Service center controlling the transfer of text messages.

## SMS - Text Messages

---

### SMS service center

Navigate to the “Message settings” submenu.

---

 /  SMS center number 

Select the submenu and confirm it

---

Enter or edit the **SMSC** number and save the setting

### Validity

You can use the menu option to define how long an attempt should be made to deliver a message which you have sent.

Navigate to the “Message settings” submenu.

---

 /  Validity period 

Select the submenu and confirm it

---

There are 5 different settings available for selection.

---

 /  

Select the duration and confirm it

### Delivery report

The corresponding confirmation is received after sending a text.

Navigate to the “Message settings” submenu.

---

 /  Delivery report 

Select the menu and confirm

## SMS - Text Messages

---

 /  On softkey or Off OK

Activate/Deactivate the delivery report and confirm it

### SMS memory status

Navigate to the "Message" menu.

---

 /  Memory status OK

Select the submenu and confirm it



The memory locations occupied and free on the mobile phone and SIM card are displayed.

### Writing an SMS text



A text message can contain up to 457 characters, including spaces. A standard message contains 160 characters. Additional costs may ensue in the case of messages containing more than 160 characters.

Menu

Open the main menu

---

 /  Message OK

Select the menu and confirm it

---

 /  Write message OK

Select the submenu and confirm it

## SMS - Text Messages

---



Write the text.



Information on ways of entering text;

Page 27.

Options

Open the menu

The following functions are available

---

Send

OK



or Search

Enter the number or select one from the phone book

---

Save

OK

The SMS text is saved in the Drafts folder.

---

Send to many

OK

The message can be sent to several recipients selected from the phone book.

---

Templates

OK

Select a template for your SMS text.

---

Execute the functions and then confirm them.

### SMS text messages sent and received



Texts received are indicated by a ringing tone which you have set. A corresponding message appears in the display.

SMS texts received are stored in the “Inbox” folder.

SMS texts sent are stored in the “Sent message” folder.

# SMS - Text Messages

---

## Editing stored texts

---

Menu	Open the main menu
 /  Message	OK
	Select the menu and confirm it
 /  Inbox	or
Sent message	OK
	Select the submenu and confirm it
Select SMS	 /  OK
	Select SMS text and confirm
Options	Open the menu
The following functions are available:	
Reply	Reply to the number from which the text was sent
Forward	Forward the text to a different number
Call	Call the number from which the text was sent
Save number	Store the number from which the text was sent
Delete	Delete the SMS text
Delete all	Delete all the SMS texts
Execute the functions and then confirm them.	

## 9 Voice Mail



It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details. They may concern services which are subject to charges.

In order to use the “Voice Mail”<sup>1</sup> feature, the relevant phone number must be programmed in your mobile phone. Normally, this has already been set up by your service provider.

### Setting up the Voice Mail feature

Menu	Open the main menu
 /  Contacts	OK Select the menu and confirm it
 /  Special numbers	OK Select the submenu and confirm it
 /  Voice mail	OK Select the submenu and confirm it

<sup>1</sup> Voice Mail, also referred to as mailbox (answering machine in mobile telecommunication network)

## Voice Mail

---

 /  Number 

Select the submenu and start editing

---

Enter or edit the voice mail number and save it

---

The following functions are also available in the “Voice mail” menu:

---

Connect to voice mail 

The voice mail number is dialled.

Execute the functions and then confirm them.

### Playing the Voice Mail messages

Navigate to the “Connect to voice mail” menu option, as previously described, and press the  softkey or

---

Hold 

A connection is established to your “Voice Mail” and you can play messages recorded.

### 10 Other Useful Features

#### One-touch dialling keys

It is possible to assign phone numbers to the one-touch dialling keys **M1**, **M2** or **M3** which are then dialled directly by pressing and holding the corresponding key;  Page 36.

Assigning a phone number to a one-touch dialling key:

<b>Menu</b>	Open the main menu
 /  <b>Contacts</b> <b>OK</b>	Select the menu and confirm it
 /  <b>Advance</b> <b>OK</b>	Select the submenu and confirm it
 /  <b>M1 M2 M3</b> <b>OK</b>	Select the submenu and confirm it
 /  <b>OK</b>	Select the one-touch dialling key and confirm it
 <b>OK</b>	Enter the number and confirm it

## Other Useful Features

### Speed dialling

Phone numbers can be assigned to the keypad  to . Then hold the corresponding key pressed longer than 3 seconds to dial the corresponding number.



Each number you want to define as a speed dial number must be stored in the phone book.

Menu

Open the main menu



Contacts

OK

Select the menu and confirm



Advance

OK


Select the submenu and confirm it



Speed dial

OK

Select the submenu and confirm it

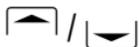

OK

Select the speed dial key and confirm it



Set/Change

OK

Select the function and confirm it



OK

Select the number and confirm it

## Other Useful Features

---

### Date and time

This menu option can be used to set and change the date and time.

To open the menu:

---

<b>Menu</b>	Open the main menu
 /  <b>Settings</b> <b>OK</b>	Select the menu and confirm it
 /  <b>General</b> <b>OK</b>	Select the submenu and confirm it
 /  <b>Time and date</b> <b>OK</b>	Select the submenu and confirm it
 /  <b>Date &amp; time settings</b> <b>OK</b>	Select the submenu and confirm it
 	Enter day/month/year and jump to time
 <b>OK</b>	Enter hours:minutes and confirm it
 /  <b>Date format</b> <b>OK</b>	Select the submenu and confirm it

## Other Useful Features

---

DD/MM/YYYY  /  OK

Select “(DD-MM-YYYY)”,  
“(MM-DD-YYYY)” or  
“(YYYY-MM-DD)”  
and confirm it

---

 /  Date separator OK

Select the submenu and  
confirm it

---

01/01/2010  /  OK

Select “-” “/” “.” or “ ” and  
confirm it

---

 /  Time format: OK

Select the submenu and  
confirm it

---

24 Hours  /  OK

Select “12 Hours” or “24 Hours” and confirm it

## Language

This menu option can be used to set and change the display language.

---

Menu Open the main menu

---

 /  Settings OK

Select the menu and confirm it

---

 /  General OK

Select the menu and confirm it


## Other Useful Features

---

-  /  Language  Select the menu and confirm it
- 
-  /  OK Select your preferred language and confirm it

## Alarm

This menu option can be used to programme 3 different alarms.

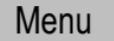-  Menu Open the main menu
- 
-  /  Tools  Select the menu and confirm it
- 
-  /  Alarm  Select the menu and confirm it
- 
-  /  Alarm 1  Select an alarm and confirm it
- 
- Off  / ,  Select "Once", "Mon~Fri", "Everyday" or "Off" and jump down
- 
- 00:00 ,  Enter hours:minutes and jump to Tone
- 
- Tone 1  / ,  Select a tone and confirm it

## Other Useful Features

### Calculator

This feature provides a simple calculator feature with which to solve simple, basic calculations.


Use the  $\uparrow$  and  $\downarrow$  keys to select the required arithmetic operation (+, -, x,  $\div$ ).

Use the  $\ast\text{€}$  key to set the decimal point.

Use the  $\#_{aA}$  key to change the sign ( $\pm$ ).

Menu


Open the main menu

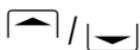

Tools

OK

Select the menu and confirm it

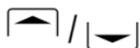

Calculator

OK

Select the submenu and confirm it

### Example

To execute the calculation “-5 x 2.5 “ you have to type the following keys;

$5_{KL}^J$   $\#_{aA}$  = -5

$\uparrow$   $\uparrow$   $\uparrow$  = x

$2_{BC}^A$   $\ast\text{€}$   $5_{KL}^J$  = 2.5

OK = -12.5

Clear = Delete


## Other Useful Features

---

### Calendar


This menu option opens the calendar. You can select other days. Use the  /  and  /  keys to navigate.

---

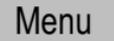	Open the main menu		
 / 	<table border="1"><tr><td>Tools</td><td></td></tr></table>	Tools	
Tools			
Select the menu and confirm it			
 / 	<table border="1"><tr><td>Calendar</td><td></td></tr></table>	Calendar	
Calendar			
Select the menu and confirm it			

### Stopwatch

---

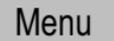	Open the main menu		
 / 	<table border="1"><tr><td>Tools</td><td></td></tr></table>	Tools	
Tools			
Select the menu and confirm it			
 / 	<table border="1"><tr><td>Stopwatch</td><td></td></tr></table>	Stopwatch	
Stopwatch			
Select the submenu and confirm it			

## Other Useful Features

---

### Network settings

This menu can be used to select mobile telecommunication networks other than your own mobile network provider. However, the corresponding agreements must have been concluded.



It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details.

Menu

Open the main menu

---



Settings

OK

Select the menu and confirm it

---



Network settings

OK

Select the submenu and confirm it

---



Automatic mode

or Manual mode

OK

Select the setting and confirm it

### Security settings

This menu is used to define which functions on the phone or SIM card should be protected by a password/PIN. The PIN and password can be changed.



PIN and PIN2 are supplied together with the SIM card. Further information is available from your SIM card provider.

---

Menu	Open the main menu
 /  Settings	OK Select the menu and confirm it
 /  General	OK Select the submenu and confirm it
 /  Security	OK Select the submenu and confirm it

## Other Useful Features

---

### PIN protection



The password is supplied together with the SIM card. If you deactivate the SIM lock, you need not enter the PIN after switching the mobile phone on.

It is recommended to leave the SIM lock on to prevent unauthorised persons from using the mobile phone.

### Phone lock



The default password programmed at the factory is 0000. If this lock is active, you must first enter the password for the phone lock after switching the mobile phone on and then enter the PIN.

### Auto keypad lock

You can set up the mobile phone so that the key lock is automatically activated after a certain time in Standby mode.

### Change password

You can change the password to lock the phone against use and altering the default settings.

Refer to Menu Structure; Page 73.

## Other Useful Features

---

### Tips

Locking your phone with your own personal PIN. You can lock your mobile phone to prevent unauthorised use by setting up a personal PIN number.

---

Menu		Open the main menu
 / 	Settings	OK Select the menu and confirm it
 / 	General	OK Select the submenu and confirm it
 / 	Security	OK Select the submenu and confirm it
 / 	PIN protection	OK Select the submenu and confirm it
 / 	Change PIN1	OK Select the menu and confirm it
Input PIN:		OK
Input new PIN:		OK
Input again new PIN:		OK

## Other Useful Features

---

### PIN& PIN2 codes

The **PIN** (**P**ersonal **I**dentify **N**umber) and PIN2 codes are 4 to 8 digit numbers. The PIN and PIN2 codes are given to you, together with the SIM card, by your network provider.

### PUK & PUK2 codes

The **PUK** (**P**ersonal **U**nblocking **K**ey) and PUK2 codes are 4 to 8-digit numbers. These are only necessary if you enter the PIN code for the SIM card incorrectly three times in succession and the SIM card is blocked. The PUK and PUK2 codes are given to you, together with the SIM card, by your network provider.

## Phone settings

### Display settings

Use this menu to adapt the phone display to your own personal needs.

---

Menu	Open the main menu
 /  Settings	OK
	Select the menu and confirm it
 /  Display	OK
	Select the submenu and confirm it
Select	
Idle display	To select a wallpaper and display the time and date

---

## Other Useful Features

---

Backlight

To set the length of time the backlight stays on

---

Background

To select a background colour

---

### Audio settings

Use this menu to adapt the phone's ringing tones to your own personal needs.

---

Menu

Open the main menu

---



Settings

OK

Select the menu and confirm it

---



Sounds

OK

Select the submenu and confirm it

---

### Select

---

Ringtones

To select specific ringing tones for various alert ringing signals

---

Volume

To select specific volumes for the various alert ringing signals.

Call = Earpiece volume level

---



Exposure to the receiver at full volume for a long period could cause ear damage.

## Other Useful Features

---

Alert type

To select whether you are alerted of incoming calls via a ringing tone or vibration


### Example - Setting the loudest Ringer

The loudest ringer is Ring tone 1 + Volume 7 = 100dB.

---

Menu


Open the main menu

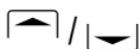

Settings

OK

Select the menu and confirm it

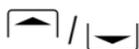

Sounds

OK


Select the submenu and confirm it



Ringtones

OK

Select the menu and confirm it

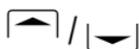

Incoming call

OK

Select the menu and confirm it



Ring tone 1

OK

Select the ringer and confirm it

---

Back



Volume

OK

Select the menu and confirm it

## Other Useful Features

---

-  /  Ring tone  Select the menu and confirm it
- 
-   Select the volume and confirm it

### Call settings

 It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details. They may concern services which are subject to charges.

### Forwarding calls

The following functions enable incoming calls to be transferred to other phone numbers.

-  Open the main menu
- 
-  /  Settings  Select the menu and confirm it
- 
-  /  Call setup  Select the menu and confirm it
- 
-  /  Call divert  Select the submenu and confirm it

Select the setting to define which calls should be redirected:

- 

## Other Useful Features

---

If busy

If no reply

If out of reach

OK

and then select

---

 /  Check status OK

Display the current setting

---

 /  Activate  OK

Enter the number and activate the call divert function.

---

 /  Deactivate OK

Deactivate the corresponding call divert function

---

### Call barring

The following function is used to restrict calls which can be received and made.

---

Menu Open the main menu

---

 /  Settings OK

Select the menu and confirm it

---

 /  Call setup OK

Select the menu and confirm it

---

 /  Call barring OK

Select the menu and confirm it

## Other Useful Features

Select the setting for which calls should be restricted:

All outgoing calls

All international calls

Only here & home

All incoming calls

Incoming calls if abroad

OK



The default password is 0000.

### Call waiting

This function issues an audible signal to inform you that another call has been received while the current call is in progress.

Menu

Open the main menu



Settings

OK

Select the menu and confirm it



Call setup

OK

Select the menu and confirm it



Call waiting

OK

Select the submenu and confirm it

## Other Useful Features

---

### Automatic redialling

When this function is activated, redialling is initiated automatically if the number dialled is “engaged”.

---

**Menu** Open the main menu

---

 /  **Settings** **OK**  
Select the menu and confirm it

---

 /  **Call setup** **OK**  
Select the menu and confirm it

---

 /  **Auto redial** **OK**  
Select the submenu and confirm it

---

 /  **Enable** **OK**  
Enable the function and confirm it

---

 /  **Disable** **OK**  
Disable the function and confirm it

## Other Useful Features

---

### Caller ID

This function is used to activate/deactivate transmission of the phone number, with which you are making the call, with the call.

---

Menu	Open the main menu
 /  Settings	OK
Select the menu and confirm it	
 /  Call setup	OK
Select the menu and confirm it	
 /  Caller ID	OK
Select the submenu and confirm it	
 /  Set by network	Hide number or
Show number	OK
Select a setting and confirm it	

### Broadcast messages

You mobile phone can receive broadcast messages<sup>1</sup>.



Information on broadcast messages, charge rates, data and offers can be obtained from your SIM card service provider.

<sup>1</sup> Broadcast, also referred to as **Cell Broadcast (CB)** = Information services from your telephone network provider

## Other Useful Features

---

**Menu** Open the main menu

---

 /  **Message** **OK**  
Select the menu and confirm it

---

 /  **Message settings** **OK**  
Select the submenu and confirm it

---

 /  **Broadcast message** **OK**  
Select the submenu and confirm it

---

Refer to Menu Structure;  Page 69.

### Default settings

The mobile phone is reset to its default (factory) settings.

---

**Menu** Open the main menu

---

 /  **Settings** **OK**  
Select the menu and confirm it

---

 /  **Factory default** **OK**  
Select the menu and confirm it

---

 During the course of the menu, you will be prompted for the phone password. The default password programmed at the factory is 0000.

### 11 SIM Tool Kit

This menu contains the SIM Application Toolkit (commonly referred to as STK) of your mobile phone provider. The content and functions available vary from provider to provider and are dependent on the SIM card used.

SIM Application Toolkit (STK) is a GSM system standard which enables the SIM to initiate actions which can be used for various value-added services.



Please contact your local mobile phone provider for details. They may concern services which are subject to charges.

# Menu Structure

## 12 Menu Structure

### Main menu

Open the main menu by pressing the **Menu** key. Then press the  /  keys to select a menu option or entry and follow the dialogue in the display using the softkeys which appear.

In this case, the softkeys are assigned different functions, e.g. OK, Go back, Cancel, Options etc.

Softkeys (grey) are only displayed in a few exceptional cases in the following menu structure.

For further information on the menu and operation,  Chapter 4.

### Message

Write message



Options

Send

Save

Send to many

Templates

Inbox

OK

Options

## Menu Structure

	Reply
	Forward
	Call
	Save number
	Delete
	Delete all
Sent message	
	Refer to Inbox
Drafts	
Templates	
Message settings	
	SMS center number
	Validity period
	Auto save SMS
	Delivery report
	Preferred storage
	SIM
	Phone
	Broadcast message
	Topic

# Menu Structure

---

	Languages
	Receive mode
Storage status	

## Contacts

---

New contact		
Save to SIM	Name 	
	Number 	
	Save to phone	
View contacts		
Options	View	
	Send SMS	
	Add to group	
	Copy to phone	
	Copy to SIM	
	Call	
	Delete	

## Menu Structure

---

View groups		
	Family	
	Friends	
	Office	
	Others	
Special numbers		
	My numbers	
	Voice mail	
Advance		
	M1 M2 M3	
	Speed dial	
	Choose contacts list	
	Copy all	
	Delete all contacts	
Storage status		

# Menu Structure

---

## Calls

---

Incoming calls	
Call	
Send SMS	
Delete	
Save number	
Delete all	
Show number	
Outgoing calls	
Refer to Incoming calls	
Missed calls	
Refer to Incoming calls	
Call duration	

## Tools

---

Alarm
Calculator
Calendar
Stopwatch

## Settings

General	
	Language
	Time and date
	Date & time settings
	Date format
	Date separator
	Time format:
	Answer mode
	Normal answer
	Any key answer
	Security
	PIN protection
	SIM lock
	Change PIN1
	Change PIN2
	Phone lock
	Auto keypad lock
	Change password

# Menu Structure

---

Display		
	Idle display	
	Backlight	
	Background	
Sounds		
	Ringtones	
	Incoming call	
	Message	
	Key tone	
	Volume	
	Call	
	Ring tone	
	Key tone	
	Alert type	
	Ring only	
	Vibrate only	
	Vibrate and ring	
Call setup		
	Call divert	
	All calls	

## Menu Structure

	Check status
	Activate
	Deactivate
If busy	
If no reply	
If out of reach	
Call barring	
All outgoing calls	
	Check status
	Activate
	Deactivate
All international calls	
Only here & home	
All incoming calls	
Incoming calls if abroad	
Call waiting	
Auto redial	
Caller ID	
	Set by network
	Hide number

## Menu Structure

---

	Show number
Network settings	
	Automatic mode
	Manual mode
Factory default	

### SIM tool kit

---

(Provider-dependent menu)
---------------------------

### 13 Trouble Shooting

#### Service hotline

Should problems arise with the telephone, please refer to the following information first. In the case of technical problems, you can contact our hotline service, Tel. 0900 00 1675 within Switzerland (cost via Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, please contact your sales outlet. There is a 2 year period of guarantee.

#### Problems and solutions

<b>Problems</b>	<b>Solutions</b>
The mobile phone cannot be switched on.	<ul style="list-style-type: none"><li>- No battery inserted.</li><li>- Battery is not loaded.</li></ul>
No signal quality is displayed.	<ul style="list-style-type: none"><li>- No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.</li></ul>

## Trouble Shooting

---

Keypad does not function or only functions very slowly.

- The operating speed of the display is reduced in the case of low temperatures. This is normal. Use the phone in a warmer location.

A message appears in the display for some functions, indicating execution/use is not possible.

- Many functions can only be used after the respective service has been applied for. Contact your service provider for more details.

Screen frozen or no response when pressing keys.

- Remove the battery for 3 minutes and try again.

No connection to the mobile telecommunication network.

- Contact your service provider.

The "Insert SIM" message appears in the display.

- Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.

## Trouble Shooting

The battery cannot be charged or is empty within a short time.

- Battery is defect.
- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Charge the mobile for 4 hours.

### Tips on the battery

Only use batteries and charging unit approved by the manufacturer, otherwise the battery could be damaged.

Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.

Keep the battery contacts clean and free of dirt.

The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

## Technical Properties

### 14 Technical Properties

#### Technical data

Feature	Value
Standard	<b>GSM</b> <sup>1</sup> 900, 1800 MHz Dualband
Dimensions	52 x 128 x 15 mm (W x H x D)
Weight	92 g incl. battery
Power supply	Input: 100-240 V, 50-60 Hz, 0.15 A Output: Mini-USB 5 V, 500 mA
Battery	3.7 V, 750 mAh Charge duration: Ap- prox. 4 h
Standby time	Up to 150 h
Max. talk time	Up to 120 min
Display	1.75" colour, Resolution 128 x 160
Key lighting	White
LED	Red/Green

<sup>1</sup> **GSM** = **G**lobal **S**ystem for **M**obile Communica-  
tions. Standard for mobile phones.

## Technical Properties

Languages	German, English, French, Italian
Phone book	Max. 200 contacts
SMS	Standard SMS Memory capacity: Max. 100 entries (Phone)
Ringing volume	Max. 100 dB
Permissible ambient temperature	-10°C to 40°C
Permissible relative humidity	30% to 75%



All Rights Reserved!

# Technical Properties

---

## Default settings

The default settings can be restored via the menu.

## Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE mark on the device.

Für die komplette Konformitätserklärung nutzen Sie bitte den kostenlosen Download von unserer Website [www.switel.com](http://www.switel.com).



### SAR Information

Information on radio frequency emissions and specific absorption rates (**SAR = Specific Absorption Rate**).

All the applicable safety standards related to radio frequency emissions were implemented during the development of this mobile phone. The limit values are based on scientific directives and contain a safety margin in order to guarantee the safety of all persons regardless of age and state of health.

The values specified in the directive concerning radio frequency emissions are based on a unit called SAR. SAR values are established using standard methods in which the phone is operated in all possible frequency bands with the highest power output. Although the SAR values of various phone models can differ, all the models were developed to maintain the relevant directives on radio frequency emissions. The following information applies to residents of countries which, as with the European Union, have adopted the SAR limit value recommended by the ICNIRP (**I**nternational **C**ommission on **N**on-**I**onizing **R**adiation **P**rotection) which lies at 2W/Kg (averaged from 10 gram tissue): The highest SAR value measured, averaged over 10 g tissue, was < 0.583 W/kg for this mobile phone measured at the ear.

## Safety Information

---

### 15 Safety Information

Please read this section carefully.



Risk of suffocation!

Keep packaging materials and protective foils out of reach of children.

### Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

### Areas of use

- Do **not** use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Check with the airline whether mobile phones may be used on board.

### **General information**

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use the original power supply and batteries. Never attempt to connect other products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.
- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- Only use the phone while driving with the correct handsfree equipment. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.

## **Safety Information**

---

- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls.  
Switch the phone off immediately if you notice or suspect any adverse effects.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

### Power adapter plug



**Attention:** Only use the power adapter plug supplied because other power supplies could damage the phone. Ensure access to the power adapter plug is not obstructed by furniture or such.

Your mobile phone is supplied with an energy-efficient switching power supply 5E-AD050050-E (Input 100~240 V<sub>AC</sub>, Output 5 V<sub>DC</sub>, 500 mA).

The adaptor input power without load is approx.

0.08 W. The average efficiency is approx. 68.9 %.

The electrical consumption during charging of the mobile phone is approx. 4.39 W.

### Rechargeable batteries



**Attention:** Never throw batteries into a fire. Only use batteries of the same type.

### Barcode label in the phone

The barcode label contains information on the phone, such as the serial number, for example. Do not remove it.

# Safety Information

---

## Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



**Batteries represent a hazard to health and the environment!**



Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers at collection points provided by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.

**Packaging materials** must be disposed of according to local regulations.

### **16 Maintenance / Guarantee**

#### **Maintenance**

- Clean the housing surfaces with a soft, fluff-free cloth.
- Do not use any cleaning agents or solvents.

#### **Guarantee**

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the

## **Maintenance / Guarantee**

---

terms of guarantee. In the case of complaints, we reserve the right to repair defect parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the SWITEL device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

## 17 Index

### A

- Alarm, 51
- At a Glance, 4, 16
- Automatic redialling, 64

### B

- Battery charge status, 8
- Battery status warning, 9
- Broadcast messages, 65

### C

- Calculator, 52
- Calendar, 53
- Call barring, 62
- Call list, 35, 39
- Call settings, 61
- Call waiting, 63
- Caller identification, 65
- Calling back, 35
- Calling back missed calls, 35
- Charging, 8
- Creating
  - phone book entries, 26, 30

### D

- Date, 11, 49
- Declaration of Conformity, 82
- Default settings, 66, 82
- Delete text, 28
- Deleting phone book entries, 30
- Dialling, 35
- Display, 18
- Display icons, 18
- Display language, 11
- Display settings, 58
- Displaying list details, 39
- During a call, 38

### E

- Editing phone book entries, 30
- Ending a call, 11, 35
- Energy-save mode, 25
- Entering names, 29
- Entering spaces, 28
- Entering text, 29

### F

- Forwarding calls, 61

### G

- Getting Started, 24
- Groups, 32
- Guarantee, 89

# Index

---

## H

- Handsfree, 36
- Hold, 38
- How does it work, 20
- How to enter
  - text and numbers, 27

## I

- Icons, 18

## K

- Keypad lock, 37

## L

- Language, 50
- Loudest Ringer, 11

## M

- Main menu, 68
- Maintenance , 89
- Making a call, 11, 35
- Making and Receiving Calls, 35
- Menu structure, 68
- Methods of entering text, 27
- Modifying
  - phone book entries, 30
- Moving the cursor, 28
- Multitap, 27
- Muting, 37

## N

- Network, 10
- Network settings, 54
- Notation, 24

## O

- On-hook, 11, 35
- One-touch dialling, 36
- One-touch dialling buttons, 47
- Other Useful Features, 47

## P

- Package contents, 6
- Phone book, 35, 38
- Phone Book Set Up, 29
- Phone settings, 58
- PIN/PIN2 code, 58
- Problems, 77
- Problems and solutions, 77
- PUK/PUK2 code, 58
- Punctuation and
  - special characters, 28

## Q

- Questions and Answers, 12
- Quick Start Guide, 4

## R

Receiver volume, 36  
Redialling, 35  
Reject, 11  
Rejecting a call, 11, 35  
Ringtone, 59

## S

Safety information, 84  
SAR Information, 83  
Security settings, 55  
Service-Hotline, 77  
Setting  
    the loudest Ringer, 11, 60  
SIM card, 6  
SIM Tool Kit, 67  
SMS, 40  
SMS settings, 40  
Softkeys, 25  
Sounds, 59, 60  
Speed dial, 48  
Standby mode, 24  
Stopwatch, 53  
Switching off, 10  
Switching on, 10

## T

Taking a call, 11, 35  
Talk time, 36  
Technical data, 80  
Time, 11, 49  
Tips on the battery, 79  
Trouble Shooting, 77  
Turn ringer Off/On, 37

## V

Voice Mail, 45  
Volume, 59

## W

Writing an SMS text, 42

# Notes

---

## Notes

# **SWITEL**

**Declaration of Conformity**



Diese Anlage entspricht der europäischen R&TTE Richtlinie.  
Für die komplette Konformitätserklärung nutzen Sie bitte den kostenlosen Download von unserer Website [www.switel.com](http://www.switel.com).

Cet équipement est conforme à la directive européenne R&TTE.  
Pour obtenir la déclaration de conformité intégrale, veuillez vous servir du téléchargement gratuit de notre site Internet [www.switel.com](http://www.switel.com).

Quest'apparecchiatura è conforme alla direttiva europea R&TTE.  
Per la dichiarazione di conformità completa si prega di voler usufruire del servizio gratuito di download dal nostro sito Internet [www.switel.com](http://www.switel.com).

This equipment complies with the European R&TTE directive.  
To view the complete Declaration of Conformity, please refer to the free download available at our web site: [www.switel.com](http://www.switel.com).

## Service Hotline

Bei technischen Problemen können Sie sich an unsere Service-Hotline unter Tel. 0900 00 1675 innerhalb der Schweiz (Kosten Swisscom bei Drucklegung: CHF 2.60/min) wenden.

S'il s'agit de problèmes techniques, vous pouvez vous adresser à notre hotline de service en Suisse en appelant le numéro 0900 00 1675 (frais Swisscom à la date d'impression de ce manuel : CHF 2.60/min).

In caso di problemi tecnici è possibile rivolgersi alla nostra hotline di assistenza tecnica chiamando al numero 0900 00 1675 valido per la Svizzera (spese da rete Swisscom alla data di stampa: CHF 2.60 / min).

In the event of technical problems, you can contact our hotline service, Tel. 0900 00 1675 within Switzerland (cost via Swisscom at time of going to print: CHF 2.60/min).