


SWITEL

M910 Mobile Phone

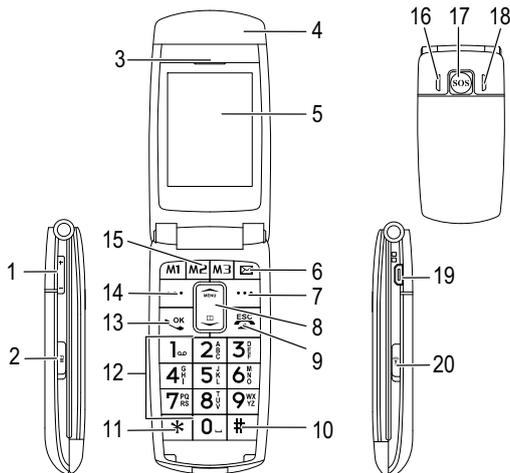

Operating Manual



Please read and observe the following information and keep the operating manual nearby for future reference!

Safety information

⚠ WARNING!

- Risk of explosion!
- ➔ Only use the power adapter plug supplied!
- ➔ Only use the battery supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use them as described.
- Risk of fatal injury with heart pacemakers!
- ➔ Always keep the phone a minimum safety distance of at least 15 cm to heart pacemakers.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Batteries represent a hazard to health and the environment!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment.

⚠ CAUTION!

- Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

ATTENTION!

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.
 - Please note that certain services must be activated by your mobile service provider before they can be used.

Intended use

This mobile phone is designed for telephoning and sending/receiving SMS messages when connected to a mobile phone network. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Operating elements

- 1 Standby mode: Ring tone louder / softer
During telephone conversation: Speaker louder / softer
- 2 Switch radio on/off
- 3 Earpiece
- 4 Signal LED
- 5 Display
- 6 In standby mode: Open menu
- 7 Right softkey: Function is shown in display at bottom right
- 8 In menu: Navigate / mark menu point
Standby mode: Open main menu, Open phone book
- 9 End / Reject call
Standby mode: Press and hold to switch phone on/off
Menu: Return to standby mode / navigate to right
- 10 Standby mode: Press and hold to switch ringing tone off/on
Writing text message: Change entry mode
- 11 Text entry: Access special characters
- 12 Digit keys 0-9
- 13 Accept calls
In menu: navigate to left
- 14 Left softkey: Function is shown in display at bottom left
- 15 One-touch dialing keys
- 16 LED torch
- 17 Emergency call button
- 18 Loudspeaker
- 19 Charging socket
- 20 Switch torch on/off

Icons

	Radio signal strength
	Battery charge state
	Unread text message
	Alarm active
	Headset connected
	Bluetooth active
	Ringer switched off
	Ringer switched on
	Vibration only
	First vibrate, then ring
	Ring and vibrate

Package contents

- | | |
|--------------------|------------------------|
| - 1 Mobile phone | - 1 USB cable |
| - 1 li-ion battery | - 1 Headset |
| - 1 Charger | - 1 Instruction manual |

Inserting the SIM card and battery

ATTENTION!

- The SIM card could be damaged.
- ➔ Pay attention that the SIM card remains clean and undamaged. Insert the SIM card the correct way around.
- The battery or phone could be damaged.
- ➔ Pay attention that the battery is inserted correctly.

Switch the mobile phone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

- ➔ Install the battery and SIM card as shown in Figures A to C.
- ➔ Install the battery compartment cover.

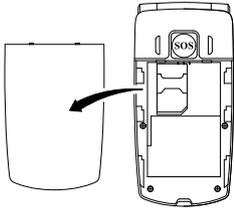


Fig. A: Remove the battery compartment cover

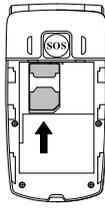


Fig. B: Insert the SIM card

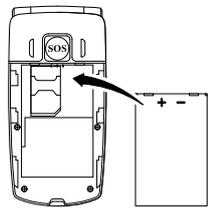


Fig. C: Insert the battery

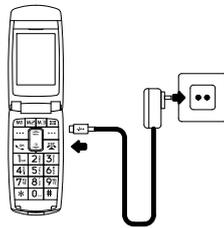


Fig. D: Charge the battery

Charging the battery

ATTENTION!

- ➔ Observe the safety instructions provided at the beginning of this manual.

When charging the battery for the first time, it should be charged for at least 12 hours. Aid a long service life of the battery by allowing the battery to fully discharge and then recharge it completely.

- ➔ Connect the power adapter plug according to Fig. D.

Display and notation of operating sequences

- Press the key depicted
- 2 sec. Press and hold down the key depicted for 2 seconds
- Mark following menu point with navigation keys / and confirm with left softkey.
- Highlight next menu point, without confirming with left softkey.
- Sequence for correct entry
- Enter numbers or letters
- [Example] Texts in brackets give instructions to select something or make an entry.
- [Phonebook] Example of display test
- [Select] Example of softkey function
- Icon in the display (example)

Standby mode

The system switches to Standby mode by pressing the key, several times if necessary.

The display switches off after a certain time in Standby mode. It appears again after pressing any key.

- All the descriptions in this manual assume that the mobile phone is in Standby mode and that the key lock is deactivated.

Entering text

The keys on the keypad are also labelled with letters for the entry of text.

- The mobile phone is provided with various methods with which to enter text. Not every method is always available for each application.

Entering text and digits with the multitap function

- ➔ Press the key containing the letter required as often as necessary until the letter appears in the display. If you want the "A" for example, press the key once; if you need the "B", press the key twice, and so on.
- ➔ To enter a further character assigned to the same key, wait approx. 2 seconds after entering the first character, until the cursor has moved to the next position.
- ➔ Then enter the next letter in the same way as described above.

Entering text with text entry aid

- ➔ When the text entry aid is active, it is only necessary to press the key with the desired letter once. Then continue immediately with the next letter. The text entry aid attempts to recognize the word you want. The recommendations are displayed. Select the correct recommendation with / and insert it into the text with .

Switch between text entry methods

- ➔

Display indicators for text entry

The display indicates which input method is active and whether text will be entered in upper and/or lower case:

- Upper case only
- Lower case only
- Upper case only with text entry aid
- Lower case only with text entry aid
- Entry of digits

- The text entry methods are also available in various languages, indicated by the corresponding letters.

Entering a space

- ➔

Entering punctuation marks and special characters

- ➔ [Select character]

- Some frequently required punctuation marks and special characters can also be generated.

Deleting characters

- ➔

Moving the cursor left or right

- ➔ /

Telephoning

- As an alternative you can also press and dial to make a call, when you have selected an entry.

Dial phone number

- ➔ [Enter emergency call number]

Select phone number from the phone book

- ➔ [Open phone book]
- ➔ / [Select entry]

Select phone number from call list

- ➔ [Call Centre] [All calls] / [Missed calls] / [Dialled calls] / [Received calls] [Select entry]

One-touch dialing M1-M3

You can save phone numbers from the phone book on keys to as one-touch dial numbers.

Save phone number on one-touch dialing key

- ➔ [Phonebook] [Select entry] [set M1] / [set M2] / [set M3] [Confirm prompt]

Delete phone number on one-touch dialing key

- ➔ [Settings] [M1-M3 settings] [set M1 number] / [set M2 number] / [set M3 number] [Delete] [Confirm prompt]

Dialling with one-touch dialling keys

- [M1] / [M2] / [M3]
- [Yes] [Confirm prompt]

Speed dial numbers

You can save phone numbers from the phone book on keys [2] to [9] as speed dial numbers.

Save phone number as speed dial number

- [Options] → Phonebook settings
- [Speed dial] → Set numbers → [Select entry]
- [Input new PIN2] → Divert if unreachable
- [Select entry from phone book]

Switching speed dial off

- [Options] → Phonebook settings
- [Speed dial] → Status [On] / [Off]

Dialling using a speed dial key

- 2 sec. [2] - [9]

Functions available when telephoning

Handsfree mode on/off

The following can be heard during the dial tone:

- [H-Free] / [H-Held]

Muting (microphone) off/on

- [Silent] / [Unmute]

Putting call on hold / retrieving

- [Options] → [Hold single call] / [Retrieve single call]

Activating/Deactivating touch-tone dialing

- [Options] → [DTMF] [On] / [Off]

[Open phone book]

- [Options] → Phonebook

[Open text message menu]

- [Options] → Messages

Setting up a conference call

While conversing with a caller, it is possible to set up a conference call with a third person.

- It may be necessary to have this service activated by your mobile service provider and could involve additional costs.

- [Options] → [Hold single call] → First call on hold.
- [Options] → [New call] → [Enter number] → [OK] → Calling other subscriber.

If the call is taken:

- [Options] → [Conference] message flashes continually in the display.

Switch between calls

- [Options] → [Hold single call] → First call on hold.
- [Accept / make other call]
- [Options] → [Swap]

[Phone book]

The phone book can be reached with this key [Options] or via the menu.

Creating a new phone book entry

- When you create a new phone book in your phone memory, you can add additional information to the phone book entry, such as email address, etc.

- [Options] → Add new contact → Select → To SIM / To phone
- [Enter name] → Select
- [Enter phone number] → OK

Deleting individual phone book entries

- [Options] → [Select entry] → [Options] → [Clear] → [Yes] [Confirm prompt]

Deleting a number of phone book entries

- [Options] → Mark contacts
- [Mark entries] → [Options] → [Clear] → [Yes] [Confirm prompt]

Deleting all phone book entries

- [Options] → Mark contacts → [Options] → Mark all
- [Options] → [Clear] → [Yes] [Confirm prompt]

Copying / moving individual phone book entries

- [Options] → [Select entry] → [Options] → [Copy] / [Move]
- [To phone] / [To SIM] → [Yes] [Confirm prompt]

Copying / moving a number of phone book entries

- [Options] → Mark contacts → [Mark entries] → [Options] → [Copy] / [Move]
- [To phone] / [To SIM] → [Yes] [Confirm prompt]

Copying / moving all phone book entries

- [Options] → Mark contacts → [Options] → Mark all
- [Copy] / [Move]
- [To phone] / [To SIM] → [Yes] [Confirm prompt]

Changing the memory location for phone book entries

- [Options] → Phonebook settings
- [Preferred storage] → [SIM] / [Phone] / [Both]

Displaying the phone book memory status

- [Options] → Phonebook settings → Storage status

SMS text messages

Writing and sending an SMS message

- [Menu] → Messages → Write message
- [Write message] → [Options] → Send to
- [Enter number] / [Add from Phonebook]
- [Enter number] → [OK] / [Select contact]
- [Options] → [Send] → Text message being sent

Sending a text message to a number of contacts

You can send a text message to a number of receivers simultaneously. For this purpose enter additional phone numbers or select contacts in phone book. The receivers selected are displayed in a list following each selection.

Using SMS templates

Transferring templates to a text

- [Menu] → Messages → Write message
- [Options] → Insert template → [Select template]

Editing templates

- [Menu] → Messages → Templates
- [Select template to be changed] → Edit
- [Change template] → [OK] → Save

Reading a text message

The blue sign LED flashes, indicating that unread text messages are present in the menu [Inbox]. Unread text messages in the menu [Inbox] are indicated by a closed envelope.

- [Menu] → Messages → [Inbox] / [Drafts] / [Outbox] → [Select text message]

- Alternatively the [Inbox] menu can also be reached with the [Envelope] key.

When a text message has been received, it can be displayed immediately by pressing the [View] softkey.

Answering a text message

- [Envelope] → [Select text message] → [Options] → Reply

Deleting individual text messages

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Clear] → [Yes] [Confirm prompt]

Deleting all text messages in a folder

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Delete all] → [Yes] [Confirm prompt]

Forward / resend text message

→ [Menu] → [Messages] → [Inbox] / [Outbox] → [Select text message] → [Options] → [Forward] / [Resend]

Calling sender

→ [Envelope icon] → [Select text message] → [Options] → [Call sender]

Use number from text message

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Insert contacts] → [Use number] → [Select number] → [Options] → [Call] / [Save number] / [Send text messages]

Copying individual text messages

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Insert contacts] → [Copy to phone] / [Copy to SIM]

Moving individual text messages

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Insert contacts] → [Move to phone] / [Move to SIM]

Copying / moving all text message

→ [Menu] → [Messages] → [Inbox] / [Drafts] / [Outbox] → [Select text message] → [Options] → [Insert contacts] → [Copy all] / [Move all] → [From SIM] / [From phone]

Voice mail / Mailbox

A Voicemail or Mailbox is a digital answering machine. If this service is activated at your mobile phone provider's, you are notified immediately when ever a message is present in our Voicemail or Mailbox. You are given the call number for your voicemail or mailbox inquiries together with the SIM card from your mobile service provider.

Saving the Voicemail/Mailbox call number

→ [Menu] → [Messages] → [SMS settings] → [Voicemail server] → [Select voicemail memory] → [Edit] → [Number] → [Enter the Voicemail/Mailbox number] → [OK]

Playing messages on the Voicemail/Mailbox

When you have stored the Voicemail number:

→ 2 sec. [1] → Connect completed to Voicemail.

Or:

→ [Menu] → [Messages] → [SMS settings] → [Voicemail server] → [Select voicemail memory] → [Call voicemail]

Additional functions

Call list

Outgoing, received and missed calls are stored in a call list.

i You can open the list [All calls] in the standby mode with the **OK** key.

Detailed view of call list entries

→ [Menu] → [Call Centre] → [All calls] / [Missed calls] / [Dialled calls] / [Received calls] → [Select entry] → [View]

Deleting an entry from the call list

→ [Menu] → [Call Centre] → [All calls] / [Missed calls] / [Dialled calls] / [Received calls] → [Select entry] → [Clear]

Deleting the call lists

→ [Menu] → [Call Centre] → [All calls] / [Missed calls] / [Dialled calls] / [Received calls] → [Options] → [Delete all] → [Yes] [Confirm prompt]

Showing all calls made

→ [Menu] → [Call Centre] → [Call timers] → [Last call] / [Dialled calls] / [Received calls]

Resetting call timer

→ [Menu] → [Call Centre] → [Call timers] → [Reset all] → [Yes] [Confirm prompt]

Displays / sounds during telephone conversation

Switching off call time display during telephone conversation

→ [Menu] → [Settings] → [Call settings] → [Advanced settings] → [Call time display] → [On] / [Off]

Setting signal tone during telephone conversation

During a telephone conversation you can use this feature to remind yourself of the time elapsed with a one-time or periodic signal tone.

→ [Menu] → [Settings] → [Call settings] → [Advanced settings] → [Off] / [Single] / [Periodic] → [Enter time] → [OK]

Rejecting calls with text message

This feature allows you to send a text message to callers, whose call you rejected.

→ [Menu] → [Settings] → [Call settings] → [Advanced settings] → [Reject by SMS] → [On] / [Off]

Radio

i The radio works only when a headset is connected.

You can switch the radio on in the menu or with the slide switch on the side of your mobile phone.

Switching radio on/off

→ [FM icon]

Find and save stations automatically

→ [Switch on radio] → [Options] → [Preset auto search]

Setting frequency manually

→ [Switch on radio] → [*] / [#]

Recording radio

→ [Switch on radio] → [Options] → [Record] → Recording is started

Stopping a recording

After stopping a recording, you can save it.

→ [Stop]

Interrupting / continuing recording

→ [Pause] / [Cont.]

Playing recording

→ [Switch on radio] → [Options] → [File list] → [Select recording] → [Play]

Setting automatic switch on/off

This feature allows you to set fixed times for your mobile phone to switch on and off. For example, you can switch your phone off at night to save energy.

You can enter up to four times at which your mobile phone is to switch on or off.

→ [Menu] → [Settings] → [Phone settings] → [Schedule power on/off]

→ [1] / [2] / [3] / [4] → [1] [Activate / deactivate automatic switch on/off]

→ [2] [Use **OK** / **ESC** to set whether the phone is to be switched on or off]

→ [3] [Enter time phone is to switch on or off]

→ [OK]

Bluetooth

With Bluetooth you can exchange data with other devices or connect you mobile phone with other devices, such headsets or hands-free systems.

Activating/deactivating Bluetooth

→ **Menu** → **Extra** → **Bluetooth** → **Power** **On** / **Off**
→ Displayed in standby mode.

Completing Bluetooth connection to another device

Bluetooth must be activated.

→ **Menu** → **Extra** → **Bluetooth** → **My device**

→ A search is made for new devices. If a device is found, simply follow the instructions on the display. If necessary, observe the instruction manual for the device.

Switching Bluetooth visibility on/off

→ **Menu** → **Extra** → **Bluetooth** → **Visibility** **On** / **Off**

Changing Bluetooth device name

→ **Menu** → **Extra** → **Bluetooth** → **Change device name**
→ [Change device name] **Options** → **Done**

Sending data via Bluetooth (example sending contact data)

→ **Menu** → **Phonebook** → [Select entry] → **Send contact** → **Via Bluetooth** → [Select device from list]

Announcing numbers

Announcing caller's phone numbers

When this feature is switched on, the phone numbers of incoming calls are announced before the ring tone sounds. This is possible only when the caller has not anonymised (suppressed) his/her phone number.

→ **Menu** → **Settings** → **Voice setting** **Incoming number voice** **On** / **Off**

Announcing digits when dialling

If this function is activated, the digits entered for a call are announced.

→ **Menu** → **Settings** → **Voice setting** **Key number voice** **On** / **Off**

Calendar

This feature allows you to enter dates you want to remember in your calendar. You can navigate in the calendar view up and down with / and to the left and right with / .

Entering new dates

→ **Menu** → **Extra** → **Calendar** → [Select date] → **Add event**

Deleting the date

→ **Menu** → **Extra** → **Calendar** **Options** → **Delete event**
→ **All** / **Specific period**

Calculator

→ **Menu** → **Extra** → **Calculator**

Calculation example

→ [Enter number]
→ [Select arithmetic operation]
→ [Enter number] **Options**
→ Result is displayed.

Alarm function

You can set up to 5 alarm times. The icon indicates that an alarm time is active.

Setting alarm time

→ **Menu** → **Extra** → **Alarm** **Add**
→ / **1.** [Switch on alarm with /]
→ / **2.** [Enter time]
→ / **3.** [Set repeat with /]

→ / **4.** [Set alarm tone with / and select ring tone]
→ / **5.** [Set sleep time with /]
→ / **6.** [Set type of warning with /]
→ **Done** **Yes** [Confirm prompt]

Delete alarm time

→ **Menu** → **Extra** → **Alarm** → [Select text message] → **Clear** / **Delete all**

Notes

The **Notes** menu allows you to note things you want to be reminded of later.

Basic settings

Setting the language

→ **Menu** → **Settings** → **Phone settings**
→ **Language** → [Select text message] **OK**

Setting the time and date

→ **Menu** → **Settings** → **Phone settings**
→ **Time and date** → **Set time/date**
→ / **HH:MM** [Enter time]
→ / **DD/MM/YYYY** [Enter date] **OK**

Setting the display format for time and date

→ **Menu** → **Settings** → **Phone settings**
→ **Time and date** → **Set format**
→ / **1.** [Set time format with /]
→ / **2.** [Set date format with /]
→ / **3.** [Set symbol for dividing date with /]

Getting time and date automatically

This feature is not supported by all mobile phone providers. If you cannot obtain the time automatically, you can set the date and time manually.

→ **Menu** → **Settings** → **Phone settings**
→ **Time and date** → **Auto update of date and time** **On** / **Off**

Entry methods

Entry methods available

This feature allows you to set the entry methods available for entering texts.

→ **Menu** → **Settings** → **Phone settings** → **Preferred Input method** → **Input Methods Configure**
→ [Show entry methods (**On**) or hide (**Off**)]

Setting default entry mode

This feature allows you to set the entry method available as a default.

→ **Menu** → **Settings** → **Phone settings** → **Preferred Input method** → **Input Methods Configure** → **Pref. input methods**
→ [Select entry method]

Personalising

Setting the ringing tone and other tones

The various tone settings for your mobile phone are grouped in 4 so-called "Profiles". Each profile has a different presetting.

Adapting profiles

All profiles except the **Silent** profile can be personalised. The **Headset** is activated automatically, when a headset is connect to your mobile phone.

→ **Menu** → **Settings** → **User profiles** → [Select profile] → **Customize** → [Adapt profile]

Activating a profile

→ **Menu** → **Settings** → **User profiles** → [Select profile] → **Activate**

Displaying settings

Setting background image

→ Menu → Settings → Display setting
→ Wallpaper → System / User defined
→ [Select image] OK

Setting screen illumination

→ Menu → Settings → Display setting
→ LCD backlight
→ [Set brightness and illumination time with /] OK

Showing/hiding time and date

→ Menu → Settings → Display setting
→ / Show date and time On / Off

Setting character size

→ Menu → Settings → Display setting
→ Font Size → Normal / Small

Switching the key back-lighting on/off

→ Menu → Settings → Display setting
→ / Keypad light On / Off

Restoring the factory settings

The phone code is required to restore the default settings. The default setting for the phone code is 0000.

→ Menu → Settings → Restore factory settings
→ [Enter phone code] OK OK [Confirm prompt]

Call settings

Call transfer

You can transfer incoming calls to another phone number. Before doing this, you must define whether you want to divert all calls or only certain calls, e.g. those which receive a busy line signal.

Setting up call transfer

→ Menu → Settings → Call settings → SIM settings → Call divert
→ Divert all voice calls / Divert if unreachable / Divert if no answer / Divert if busy / Divert all data calls → Enable → To new number / To voice mail
→ [Enter phone number] OK

Deactivating call forwarding

Deactivating call forwarding for specific call

→ Menu → Settings → Call settings → SIM settings → Call divert
→ Divert all voice calls / Divert if unreachable / Divert if no answer / Divert if busy / Divert all data calls → Deactivate

Deactivating universal call forwarding

→ Menu → Settings → Call settings → SIM settings → Call divert → Cancel all diverts

Barring calls

This function inhibits outgoing and incoming transmissions according to specific conditions defined. E.g. you can reject incoming calls when you are abroad.

This service must be supported by your mobile service provider and you also require the network code of your mobile service provider. Additional fees may be incurred.

→ Menu → Settings → Call settings → SIM settings → Call barring → [Select type of call barring]
→ [Enter network code] OK Yes [Confirm prompt]

Deactivating call barring

→ Menu → Settings → Call settings → SIM settings → Call barring → Cancel all
→ [Enter network code] OK Yes [Confirm prompt]

Changing password for call barring

→ Menu → Settings → Call settings → SIM settings → Call barring → Change barring password
→ [Enter old network code]
→ [Enter new network code]
→ [Confirm new network code]

Activating/Deactivating call waiting

This feature notifies you during a telephone conversation, that another caller is trying to reach you.

→ Menu → Settings → Call settings → SIM settings → Call waiting → Activate / Deactivate

Transfer / suppress own phone number

You can set whether your phone number is to be transferred or suppressed when you make a call, or if this setting is to change depending on the mobile telecommunications network.

→ Menu → Settings → Call settings → SIM settings → Caller ID → Set by network / Hide ID / Send ID

Switching back and forth between calls

If you have activated this feature at your mobile phone provider's, you can switch back and forth between calls.

→ Menu → Settings → Call settings → SIM settings → Line switching → Line 1 / Line 2

SMS settings

Test message profiles

You can create 2 profiles for sending text messages. Each profile comprises various settings.

Adapting text message profiles

→ Menu → Messages → SMS settings → Profile settings → [Select profile] → Edit
→ 1. [Enter profile name] Options → Done
→ / 2. [Enter SMSC number]
→ / 3. [Set validity time with /]
→ / 4. [Set message type with /]

Activating/deactivating text message profile

→ Menu → Messages → SMS settings → Profile settings → [Select profile] → Activate

Request status report

→ Menu → Messages → SMS settings → Common settings → Delivery report On / Off

Setting reply path

→ Menu → Messages → SMS settings → Common settings → Reply path On / Off

Displaying the SMS memory status

→ Menu → Messages → SMS settings → Storage status

Setting standard text message memory

→ Menu → Messages → SMS settings → Preferred storage → SIM / Phone

Display number of receivers / text messages sent

→ Menu → Messages → SMS settings → Message counter

Resetting text message counter

→ Menu → Messages → SMS settings → Message counter → Sent / Received Reset

Security settings

The PIN is supplied together with the SIM card by your mobile service provider.

Switching the PIN password on/off

- Menu → Settings → Security settings → SIM lock
- [Enter PIN1] OK

Switching phone code lock on/off

If you have activated the phone code lock on your mobile phone, it is necessary to enter the password in addition to the PIN, when switching on your mobile phone.

- The default setting for the phone code is **0000**.

- Menu → Settings → Security settings → Phone lock
- [Enter phone code] OK

Changing PIN / PIN2 / phone code

- Menu → Settings → Security settings → Change password → PIN / PIN2 / Phone password
- [Enter old PIN1/PIN2/phone code] OK
- [Enter new PIN1/PIN2/phone code] OK
- [Confirm new PIN1/PIN2/phone code] OK

SOS (emergency call) settings

You can enter up to 5 emergency call numbers to be dialed one after the other when an emergency call is activated, until one of the numbers called answers the emergency call. If the emergency call is not answered within approx. 3 minutes, a new emergency call to the local rescue service is started.

It is also possible to compile an SOS text message which is sent together with the SOS calls.

Enter / change emergency call numbers

- Menu → Settings → SOS setting → SOS numbers setup
- [Select memory location] → Edit
- Search [Select phone book entry] OK

- You can also enter a phone number directly and confirm your entry with OK.

Delete one / all emergency phone number(s)

- Menu → Settings → SOS setting → SOS numbers setup
- [Select memory location] → Clear / Delete all OK [Confirm prompt]

Preparing the emergency text message

- Menu → Settings → SOS setting → SOS smscontent
- [Select message]
- [Enter emergency text message] Options → Done

Switching the SOS function on/off

- Menu → Settings → SOS setting → SOS numbers setup
- [Status] On / Off

Enter / change public emergency call numbers

- The default emergency phone number is set to 112. Be careful not to trigger a public emergency call unintentionally!

- Menu → Settings → SOS setting → Public emergency number → SOS numbers setup
- [Enter phone number] OK

Changing public emergency call number

- Menu → Settings → SOS setting → Public emergency number → SOS smscontent
- [Enter emergency text message] OK

Triggering an SOS call

- 3 sec. SOS
- An announcement is made, that a call has been activated.

- If you have prepared an emergency text message, it is sent.
- An acoustic signal sounds.
- The phone numbers entered are dialed one after another.
- When the emergency call is answered, the siren is muted and the call switched to speakerphone.

If none of the emergency phone numbers answers the emergency call, the phone number saved as the public emergency phone number is dialed after approx. 3 minutes.

Aborting SOS call



- If the emergency call is aborted, the public emergency phone number is still dialed after approx. 3 minutes.

Ending the SOS call

- 3 sec. [*] → An announcement is made that the emergency call has been terminated.

Service hotline

In the case of technical problems, contact our Service hotline.

Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min).

In the case of claims under the terms of guarantee, please contact your sales outlet.

Technical properties

Technical data

Feature	Value
Standard	- GSM 900, 1800 MHz Dualband
Dimensions (W x H x D)	- 52 x 108,3 x 17,3 mm
Weight	- 106 g (including battery)
Power supply	- Input: 100-230 V, 50-60 Hz, 0.2 A - Output: Mini USB 5 V, 700 mA
Battery	- 3.7 V, 1000mAh
Standby time	- up to 200 hours
Max. talk time	- up to 180 minutes

All Rights Reserved!

Power adapter plug

Your mobile phone is equipped with an energy-efficient power adapter plug UT-003E-698 (input 100-240 V_{AC}, output 5 V_{DC}, 500 mA). The zero load is approx. 0.18 W. The average efficiency is approx. 68.2 %. The power consumption while charging the mobile phone is approx. 1 W.

SAR information

Information on radio frequency emissions and specific absorption rates (**SAR = Specific Absorption Rate**).

All the applicable safety standards related to radio frequency emissions were implemented during the development of this mobile phone. The limit values are based on scientific directives and contain a safety margin in order to guarantee the safety of all persons regardless of age and state of health.

The specified values established according to the directives on radio frequency emissions are based on a measurement unit referred to as SAR. SAR values are established using standard methods in which the phone is operated in all possible frequency bands with the highest power output.

Although the SAR values of various phone models can differ, all the models were developed to maintain the relevant directives on radio frequency emissions.

The following information applies to residents of countries which, as with the European Union, have adopted the SAR limit value recommended by the IC-NIRP (International Commission on Non-Ionizing Radiation Protection) which lies at 2 W/kg (averaged from 10 gram tissue):

The highest SAR value measured, averaged over 10 g tissue, was 0.237 W/kg for this mobile phone measured at the ear.

Maintenance

- ➔ Clean the surface of the housing with a soft, fluff-free cloth.
- ➔ Do not use any cleaning agents or solvents.

Disposal



In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!



You are legally obliged to dispose of power packs and batteries at the point-of-sale or in the corresponding containers provided at collection points by the public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.



Packaging materials must be disposed of according to local regulations.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the SWITEL device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Declaration of Conformity



This device fulfils the requirements stipulated in the EU directive 1999/5/EC concerning radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site at www.switel.com.