








# SWITEL

## M 210 Zürich Mobile Phone



### ENGLISH

#### Operating Manual

 Please read and observe the following information and keep the operating manual nearby for future reference!

### WARNING!

#### Safety information


- Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together.
- ➔ Never use rechargeable batteries or standard batteries with different capacities or charge statuses together.
- ➔ Never use standard or rechargeable batteries which are damaged.
- Risk of fatal injury with heart pacemakers!
- ➔ Always keep the phone a safety distance of at least 15 cm to heart pacemakers.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

### CAUTION!

- Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

### ATTENTION!

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

 Note that you may certain services from your cellphone need to enable this provider before you can use it.

#### Package contents

1 Mobile phone, 1 Li-ion battery, 1 Headset, 1 Charging Cradle, 1 Charger, 1 USB cable, 1 Operating manual.

#### Intended use

This mobile phone is designed for telephoning and sending/receiving SMS texts when connected to a mobile phone network. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

#### OPERATING ELEMENTS

- 1 Display
- 2 Direct call keys M1, M2, M3
- 3 Left soft key (Function is displayed on the bottom of the display) During a telephone "hands-free" on / off
- 4 Call key
- 5 Keypad
- 6 Star key, 2 x short press = "+" for international prefix
- 7 Earpiece
- 8 Right soft key, (Function is displayed on the bottom of the display) In stand-by mode: Phonebook
- 9 End call key / Press 3 sec. = On/Off
- 10 Microphone
- 11 Hash key for 3 sec. = Silent mode, Aa1 text input switch
- 12 Mini-USB charging socket
- 13 Volume up/Down
- 14 Charge contact plate
- 15 Camera
- 16 LED Charging / Missed calls
- 17 Headset socket
- 18 Emergency call switch
- 19 Battery cover
- 20 Loudspeaker
- 21 Navigation key

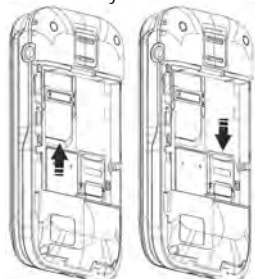 
#### Inserting the SIM card and battery

##### ATTENTION!

- The SIM card could be damaged.
- ➔ Pay attention that the SIM card remains clean and undamaged. Insert the SIM card the correct way around.
- ➔ The battery or phone could be damaged.
- ➔ Pay attention that the battery is inserted correctly.

Switch the mobile phone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

Remove battery compartment cover, insert SIM card, insert battery, replace battery compartment cover


 





 
 
 


#### Charging the battery

















- Charge the battery for at least 12 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the battery.

Place the mobile phone in the charger or use the mini USB port.

#### DISPLAY AND NOTATION OF OPERATING SEQUENCES

-  Press the button depicted
- 3 sec.  Press and hold down the button depicted for 3 sec.
-  Sequence for correct entry
-   Select next menu option with the
-  /  /  /  keys and confirm by pressing the softkey
-  Enter digits or letters
- [Example] Texts in brackets give instructions to select something or make an entry.
- Settings** Text in the display (example)
- Option** Softkey (example)

#### INFORMATION ON DISPLAY:



 
 



-  Signal strength
-  Battery capacity
-  SMS is received
-  New call
-  Alarm activated
-  Ringtone "Normal/Vibrate"
-  Ring only
-  Headphones are connected
-  Boost is activated
-  Vibrate then ring
-  Vibrate only
-  Silent mode is activated
-  USB is connected
-  A stopwatch is running
-  Roaming
-  Call forwarding active

#### Phone on / off



 
- ➔ 3 sec.   Possibly [enter the PIN code of the SIM card]

#### QUICK LINKS:


In standby mode, you have access to the following keys:

-  = Redial / answer a call
-  = Stop action, returns to stand-by mode
-  3 sec. = Access the mailbox / voicemail number set
-  = Profiles
-  = Shortcuts
-  = Messages
-  = Alarm


#### Phone call

- ➔  [Dial phone number] 
- ➔ Ending a call 

#### Call using speed dial

- ➔ 3 sec.  (Example)

#### 2 to 9 keys to set as speed dial keys

- ➔ **Menu** **Phonebook** **OK** **Phonebook settings**
- Select** **Speed dial** **OK** **Set numbers** **OK**  [Select a button] **Edit** **From Phonebook**
- Select** [Select a number] **OK**

 

#### Storing a one-touch dialling key (M1, M2, M3)

- ➔ **Menu** **Settings** **OK** **Direct Number** **OK**
- M1** **OK** [Edit an entry] **Edit** [Select a number] **OK**

#### Mute the microphone during a call

- ➔ **Option** **Mute** **On**

#### 3-party conference during a call

- ➔ **Option** **New call** **OK**  [Enter a number] **Option**
-  **Call** **OK** After the second Participants reported:
- ➔ **Option** **Conference** **Edit** **OK**


 
#### SETTINGS:

Tone, Phone, Network, Security, Reset

#### Setting the language

- ➔ **Menu** **Settings** **OK** **Phone settings** **OK**
- Language** **OK** [Select language] **OK**


#### Set Time and Date

- ➔ **Menu** **Settings** **OK** **Phone settings**
- OK** **Date and time** **OK** **Set time / date**
- OK**  [Set time]  [set date] **Save**

#### User profile

- ➔ **Menu** **Settings** **OK** **Profiles**
- OK** [Select to be changed] **OK**

#### Restore Factory Settings

 **ATTENTION:** Resetting to factory settings **CLEARs** all personal settings. The data in SIM card are not deleted.


 
 
- ➔ **Menu** **Settings** **OK** **Restore factory settings** **OK**  [Code: 1122] **OK**

Other settings in the "User Profile" similar to the above.

#### PHONEBOOK:

Add new contacts, contacts copy / move, phonebook settings, speed dial



#### Creating a new phonebook entry

- ➔ **Menu** **Phonebook** **OK** **Option**
- Add new contact** **Select**  [Enter name]  [Enter number]  [Enter additional number]

**NOTE:** You can enter a number and name. After the complete input

- Option** **Save** **Select**

#### Take an entered number in the phone book

- ➔  [Enter number] **Option** **Save to Phonebook**
- Select**  [Enter name] **Option** **Save** **Select**

#### Calling from the phonebook

- ➔ **Names** [Selekt name] [Selekt number] 

#### Change location for phonebook entries

- ➔ **Names** **Option** **Phonebook settings** **Select** **Preferred storage** **OK** [Phone / SIM / Both] **OK**

Other settings in "Phone book" menu similar to the above.

 
 
#### CALL CENTER:

Call history, call settings

#### Manage and delete call logs

- ➔ **Menu** **Call center** **OK** **Call history** **OK**
- Delete call logs** **OK** **All calls** **Delete**


#### Call barring:

- ➔ **Menu** **Call center**
- OK** **Call settings** **OK** **Outgoing calls** **OK** **International voice calls**
- OK** **Activate** **OK**  [The requested password is depending on your network provider.]  finished

Other settings in "Call center" menu similar to the above.

 
#### SOS SETTINGS:

This phone is equipped with an emergency call function. You can register up to 5 personal phone numbers for automatic periodic dialling or an emergency phone number for an emergency call centre.

 **ATTENTION:** It is forbidden to enter a public emergency number such as police, fire and rescue control centre. It is a purely "private" emergency call.


#### Enter / chang / delete emergency numbers

- ➔ **Menu** **SOS** **OK** **Set SOS number**

- OK** **Edit**  [Transfer number from the phone book or enter in the cells 1 to 5]
- OK** **Save**

#### Recording a emergency voice message


If you are not sure of an emergency, you can talk to the called party after the entry personally, save a voice message on the phone. This will played to the called party.

 **ATTENTION:** Please mention explicitly in your personal emergency message, that the called party will have to press key "0" to be able to speak with you. If not, the loop continues. This prevents the emergency loop from terminating, when, for example, an answering machine takes your emergency call.

- ➔ **Menu** **SOS** **OK** **Set outgoing voice**
- OK** **Custom** **record** **OK** [Now talk message]

The message can be up to 10 seconds. To stop recording, press **Stop**

#### Emergency call on / off

- ➔  **SOS** [Push it up to make an emergency call. Slide down to end the emergency call.]

Other settings in "SOS" menu similar to the above.

#### ORGANIZER:

Calendar, alarms, calculator


 
#### Alarm

- ➔ **Menu** **Organizer** **OK** **Alarm** **OK** **Edit**
-  [status/time/repeat/Alarm tone/Alert type] **Save**

You can set 5 different alarms, which will sound once, daily or only on certain days.

#### Calculator

Add, subtract, multiply and divide


- ➔  [Enter the numbers with navigation keys and select arithmetic operation as shown.]
- ➔  [Leave the calculator]

Other settings in "Organizer" menu similar to the above.

#### SMS Messages:

Received messages, write messages, manage inbox / outbox, save templates, settings, message / copy / move

#### SMS write and send

- ➔ **Menu** **Messages** **OK** **Write message**
- OK** **Option** **Insert template** [Here you can choose from different texts] **Select** **OK** **Option** **Send to** **Select**
-  [Enter the number or copy from the phone book] **OK**
- Option** **Send** **Select**

#### SMS receive / read / answer

- ➔ **Menu** **Messages** **OK** **Inbox** **OK**
- [Select message] **Option** **View** **Select** [Read message]
- Option** **Reply** **Select**  [Edit text] **Option**
- Send to** **Select** [Message will be send]

#### To save messages

- ➔ **Menu** **Messages** **OK** **SMS settings** **OK**
- Preferred storage**  [Select SIM or phone with >] **Save**

Other settings in "Message" menu similar to the above.

#### SERVICES:


In this menu, you can get paid services of your provider.


#### Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer. If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.


#### Disposal

 In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre).

 According to the laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

 You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities. Packaging materials must be disposed of according to local regulations.

#### Declaration of Conformity

 This device fulfils the requirements stipulated in the Directive 2014/53/EU on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site www.switel.com.

#### Technical data (All rights reserved)

Feature	Value
M 210 Zürich with SOS Emergency call and camera	
Quad-Band	850/900/1800/1900 MHz
Battery	Li-Ion, 3.7V, 900 mAh
Dimensions	100 x 50 x 20 mm (closed) 185 x 51 x 12 mm (open)
Weight	92,0 g
Max. earpiece volume	+24 dB (distortion < 5 %)
USB connection	Micro USB, EU Standard
Talk time	up to 7 hours
Standby time	up to 8 days
Headset connection	3,5 mm jack
SAR values	GSM 900 MHz 0.763 W/kg DCS 1800 MHz 0.554 W/kg

#### Power adaptor plug

Use the energy-efficient power adaptor model W&T-AD06F050050EU (input 100-240V, 50/60Hz, 0.3A, output 5V,500mA)

#### Maintenance

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.